

# Classical and Quantum Theory of Non-Conservative Electric Circuits

Matteo Mariani<sup>\*</sup>

*Institute for Quantum Computing, University of Waterloo,  
200 University Avenue West, Waterloo, Ontario N2L 3G1, Canada and  
Department of Physics and Astronomy, University of Waterloo,  
200 University Avenue West, Waterloo, Ontario N2L 3G1, Canada*

(Dated: November 2, 2021)

In this Letter, I introduce an algorithmic method to find the conservative energy and non-conservative power of a large class of electric circuits, including superconducting loops, based on the incidence matrix of the circuits' digraph. I consider only two-port linear (except for simple non-linear elements) circuits with holonomic constraints provided by either Kirchhoff's current laws or Kirchhoff's voltage laws. The method does not require to find any Lagrangian. Instead, the circuit's classical or quantum Hamiltonian is obtained from the energy of the reactive (i.e., conservative) circuit elements by means of transformations complementary to Hamilton's equations. Dissipation and fluctuations are accounted for by using the Rayleigh dissipation function and defining generalized Poisson brackets. Non-conservative elements (e.g., noisy resistors) are included *ab initio* using the incidence-matrix method, without needing to treat them as separate elements. Finally, I show that in order to form a complete set of canonical coordinates, auxiliary (i.e., parasitic) circuit elements are required to find the Hamiltonian of circuits with an incomplete set of generalized velocities. In particular, I introduce two methods to eliminate the coordinates associated with the auxiliary elements by either Hamiltonian or equation-of-motion reduction.

Electric circuit theories analogous to classical Hamiltonian mechanics and quantum mechanics have been developed by many authors in the past century. The first article we are aware of is by D.A. Wells in 1938 [1], where linear circuits are treated. Over the next several decades, a large body of work culminated with the theory of non-linear circuits by B.M. Maschke *et al.* in Ref. [2]. More recently, the development of quantum computers based on superconducting circuits has renewed the interest in this topic; the works by Burkard *et al.* in Ref. [3] and by Vool and Devoret in Ref. [4] explore similar approaches, although the former follows a very rigorous method and the latter a more practical one. Other works include the quantum network theory by Yurke and Denker [5] as well as the Foster representation method of Russer and Russer [6]. Additionally, it is worth mentioning the seminal works on noisy resistors by J.B. Johnson [7] and H. Nyquist [8], which are still very relevant for treating circuit dissipation and fluctuations, as well as the so-called input-output theory by Gardiner and Collet [9].

The first objective of this Letter is to introduce an algorithmic method to find the classical Hamiltonian of a conservative electric circuit, without needing any Lagrangian. We begin by analyzing the electric circuit shown in Fig. 1 (a) and, then, generalize the method to the study of more general two-port linear circuits with holonomic constraints. Throughout the article, we indicate a potential difference (or voltage) as  $v$ ; a current as  $i$  (without dot, not to get confused with time derivatives); a flux as  $\phi$ ; a charge as  $q$ .

The physical circuit in Fig. 1 (a) is comprised of two inductively coupled resonators. Each resonator is realized as the parallel connection of a capacitor with self-capacitance  $C_1$  or  $C_5$  and an inductor with self-

inductance  $L_2$  or  $L_4$ ; the two resonators are coupled by means of an inductor with mutual inductance  $M$ . Excluding any parasitic capacitance, the physical inductively coupled circuit is unconnected. By means of a well-known artifice [10], we can draw an equivalent connected circuit as diagrammed in Fig. 1 (b).

Figure 1 (c) illustrates the digraph [10] associated with the connected circuit in Fig. 1 (b). The digraph is comprised of  $n = 4$  nodes,  $\mathcal{N} = \{\textcircled{1}, \textcircled{2}, \textcircled{3}, \textcircled{4}\}$ , as well as  $b = 5$  oriented branches,  $\mathcal{B} = \{1, 2, \dots, 5\}$ ; we set  $\textcircled{4} \rightarrow$  datum, i.e., to a reference node experimentally realized by earthing or grounding the circuit. The sign

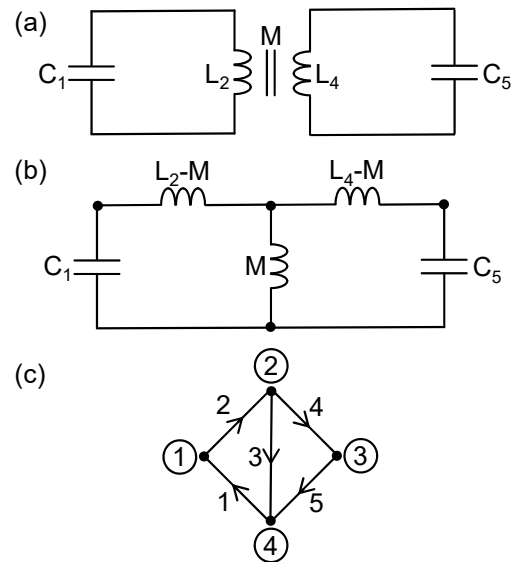


FIG. 1. (a) Two inductively coupled resonators. (b) Connected circuit. (c) Digraph.

convention for the oriented branches with respect to a node is that any branch entering the node is given the value  $-1$  and any branch exiting it the value  $1$ ; if a branch does not enter or exit the node, it is given the value  $0$ .

The branch currents (as well as charges), the branch voltages (as well as fluxes), and the node-to-datum voltages are represented by the vectors

$$\begin{cases} \vec{i}^T = [\iota_1 \ \iota_2 \ \iota_3 \ \iota_4 \ \iota_5] & (\vec{q}^T = [q_1 \ q_2 \ q_3 \ q_4 \ q_5]) & (1a) \\ \vec{v}^T = [v_1 \ v_2 \ v_3 \ v_4 \ v_5] & (\vec{\phi}^T = [\phi_1 \ \phi_2 \ \phi_3 \ \phi_4 \ \phi_5]) & (1b) \\ \vec{e}^T = [e_1 \ e_2 \ e_3 \ e_4] & , & (1c) \end{cases}$$

where  $[\cdot]^T$  indicates the transpose of a vector or matrix  $[\cdot]$ .

Following the digraph sign convention outlined above, the incidence matrix (see, e.g., Ref. [10]) for the digraph of Fig. 1 is

$$\mathbf{A}_a = \begin{matrix} & \begin{matrix} 1 & 2 & 3 & 4 & 5 \end{matrix} \\ \begin{matrix} \textcircled{1} \rightarrow \\ \textcircled{2} \rightarrow \\ \textcircled{3} \rightarrow \\ \textcircled{4} \rightarrow \end{matrix} & \begin{pmatrix} -1 & 1 & 0 & 0 & 0 \\ 0 & -1 & 1 & 1 & 0 \\ 0 & 0 & 0 & -1 & 1 \\ 1 & 0 & -1 & 0 & -1 \end{pmatrix} \end{matrix} . \quad (2)$$

The reduced incidence matrix  $\mathbf{A}$  is found by striking out

the row in  $\mathbf{A}_a$  associated with the datum, resulting in

$$\mathbf{A} = \begin{bmatrix} -1 & 1 & 0 & 0 & 0 \\ 0 & -1 & 1 & 1 & 0 \\ 0 & 0 & 0 & -1 & 1 \end{bmatrix} . \quad (3)$$

In matrix form, Kirchhoff's current laws (KCL) and Kirchhoff's voltage laws (KVL) are  $\mathbf{A} \vec{i} = 0$  and  $\vec{v} = \mathbf{A}^T \vec{e}$ , respectively.

Among all possible vectors  $\vec{i}$ , the set of branch current vectors satisfying KCL is called the *KCL solution subspace*  $K_i$ ; the dimension of  $K_i$  is  $D_i = b - n + 1$ . Similarly, we can define the *KVL solution subspace*  $K_v$ , the dimension of which is  $D_v = n - 1$  (see Ref. [10]). The subspace associated with the degrees of freedom (DOF) of the circuit has dimension  $D = \min(D_i, D_v)$ . Note that  $D$  is usually larger than the dimension of the actual DOF. This happens when needing auxiliary circuit elements. In those cases, the actual DOF subspace is found by performing a Hamiltonian reduction, as explained later in this work.

For the circuit of Fig. 1 (b),  $D = \min(D_i = 5 - 4 + 1, D_v = 4 - 1) = 2$ . Thus,  $D = D_i = 2$  and the circuit should be solved using KCL: This is a KCL circuit. The KCL relation at node  $\textcircled{2}$  gives  $\iota_3 = \iota_2 - \iota_4$ . This constraint sets the branch currents associated with the two DOF to be  $\iota_2$  and  $\iota_4$ .

The voltage branch equation for a generic inductor with current  $\iota_L = \dot{q}_L$  and inductance  $L$  is  $v_L = \dot{\phi}_L = L \dot{\iota}_L$ , where  $\phi_L$  is the inductor's flux. The instantaneous inductive energy of the circuit is obtained by integrating the inductive power from an initial time  $t' = 0$  to a generic time  $t' = t$ ,

$$\begin{aligned} \mathcal{E}_L(t) &= \int_0^t dt' \mathcal{P}_L = \int_0^t dt' (v_2 \iota_2 + v_3 \iota_3 + v_4 \iota_4) \\ &= \int_0^t dt' \frac{d}{dt'} \left[ \frac{1}{2} (L_2 - M) \dot{q}_2^2(t') + \frac{1}{2} M (\dot{q}_2 - \dot{q}_4)^2(t') + \frac{1}{2} (L_4 - M) \dot{q}_4^2(t') \right] . \end{aligned} \quad (4)$$

Hereafter, unless otherwise specified, we set all initial conditions to zero [e.g.,  $\dot{q}_2(0) = \dot{q}_4(0)$ ] and hide the time dependence of all variables. We obtain,

$$\mathcal{E}_L = \frac{1}{2} L_2 \dot{q}_2^2 - M \dot{q}_2 \dot{q}_4 + \frac{1}{2} L_4 \dot{q}_4^2 . \quad (5)$$

We still have to use the two remaining KCL relations at nodes  $\textcircled{1}$  and  $\textcircled{3}$ , yielding  $\dot{q}_1 = \dot{q}_2$  and  $\dot{q}_4 = \dot{q}_5$ . These two constraints are equivalent to

$$q_1 = q_2 + \tilde{q} \quad (6a)$$

$$q_5 = q_4 + \tilde{\tilde{q}} , \quad (6b)$$

where  $\tilde{q}$  and  $\tilde{\tilde{q}}$  are constant charge offsets. It is easy to

show that these offsets (which would correspond to DC voltages in the circuit's equations of motion) must be further constrained due to Tellegen's theorem [10].

Similarly to  $\mathcal{E}_L$ , the instantaneous capacitive energy of the circuit reads

$$\begin{aligned} \mathcal{E}_C &= \int_0^t dt' \mathcal{P}_C = \int_0^t dt' \frac{d}{dt'} \left[ \frac{1}{2} C_1 \dot{\phi}_1^2(t') + \frac{1}{2} C_5 \dot{\phi}_5^2(t') \right] \\ &= \frac{1}{2} C_1 \dot{\phi}_1^2 + \frac{1}{2} C_5 \dot{\phi}_5^2 . \end{aligned} \quad (7)$$

The total circuit's energy  $\mathcal{E} = \mathcal{E}_L + \mathcal{E}_C$  encodes the exact same information as the Hamiltonian; however,  $\mathcal{E}$  is written in terms of the two distinguished sets of generalized velocities  $\{\dot{q}_2, \dot{q}_4\}$  and  $\{\dot{\phi}_1, \dot{\phi}_5\}$ , whereas we ex-

pect the Hamiltonian to be written in terms of one set of canonical coordinates  $\{\phi_2, \phi_4; q_2, q_4\}$ . In order to obtain the Hamiltonian from  $\mathcal{E}$ , we need to solve the two systems of equations

$$\left\{ \begin{array}{l} \frac{\partial}{\partial \dot{\phi}_1} \mathcal{E} = q_1 \\ \frac{\partial}{\partial \dot{\phi}_5} \mathcal{E} = q_5 \end{array} \right. \quad (8a)$$

$$\left\{ \begin{array}{l} \frac{\partial}{\partial \dot{q}_2} \mathcal{E} = -\phi_2 \\ \frac{\partial}{\partial \dot{q}_4} \mathcal{E} = -\phi_4 \end{array} \right. \quad (8b)$$

These equations are analogous to Hamilton's equations [11]. This explains the *minus sign* on the right-hand side of Eqs. (8b). Nevertheless, we prefer to invert these equations to obtain the circuit's Hamiltonian for three main reasons: Firstly, and chiefly, by substituting Eqs. (6a) and (6b) into the right-hand side of Eqs. (8a), we are able to write all subsequent equations only as a function of the DOF variable set  $\{\phi_2, \phi_4; q_2, q_4\}$  (solving the apparent issue of using  $q_1$  and  $q_5$  as independent variables); secondly, when considering Josephson tunnel junctions (see below), it is highly desirable (practically necessary) to use charge and flux variables instead of voltages and currents; lastly, the Hamiltonian is more standard than the energy  $\mathcal{E}$  and, thus, better suited for quantization.

In matrix form, the system of Eqs. (8b) becomes

$$\begin{bmatrix} L_2 & M \\ M & L_4 \end{bmatrix} \begin{bmatrix} \dot{q}_2 \\ \dot{q}_4 \end{bmatrix} \triangleq \mathbf{L} \vec{\dot{q}}_i = -\vec{\phi}_i \triangleq \begin{bmatrix} -\phi_2 \\ -\phi_4 \end{bmatrix}, \quad (9)$$

where  $\mathbf{L}$  is the inductance matrix. Similarly,

$$\begin{bmatrix} C_1 & 0 \\ 0 & C_5 \end{bmatrix} \begin{bmatrix} \dot{\phi}_1 \\ \dot{\phi}_5 \end{bmatrix} \triangleq \mathbf{C} \vec{\dot{\phi}}_i = -\vec{q}_i \triangleq \begin{bmatrix} (q_2 + \tilde{q}) \\ (q_4 + \tilde{q}) \end{bmatrix}, \quad (10)$$

where  $\mathbf{C}$  is the capacitance matrix. By solving the system of Eqs. (9) for  $\dot{q}_2$  and  $\dot{q}_4$  and the system of Eqs. (10) for  $\dot{\phi}_1$  and  $\dot{\phi}_5$  and substituting the results into Eqs. (5) and (7) and summing, we find the circuit's Hamiltonian

$$\mathcal{H} = \frac{1}{\det \mathbf{L}} \left( \frac{L_4}{2} \phi_2^2 + \phi_2 M \phi_4 + \frac{L_2}{2} \phi_4^2 \right) + \frac{(q_2 + \tilde{q})^2}{2C_1} + \frac{(q_4 + \tilde{q})^2}{2C_5}. \quad (11)$$

From  $\mathcal{H}$  we can find the circuit's equations of motion, as well as the quantized Hamiltonian if needed.

In general, assume the sets  $\{\phi_k, \dot{\phi}_k\}$  and  $\{q_k, \dot{q}_k\}$  represent two distinguished sets of generalized coordinates and

their corresponding time derivatives (i.e., generalized velocities), with  $k \in \mathbb{N}$ ; the variables  $q_k$  are also the conjugate momenta of the generalized coordinates  $\phi_k$ . Therefore,  $\{\phi_k, q_k\}$  is a set of canonical coordinates. However, depending whether we are studying a KVL or KCL circuit, the total circuit energy usually reads

$$\mathcal{E}_{\text{tot}} = \mathcal{E}_{\text{tot}}(\phi_i, \dot{\phi}_i; q_j, \dot{q}_j), \quad (12)$$

where the actual DOF variable set is either  $\{\phi_i, \dot{\phi}_i\}$  for a KVL circuit or  $\{q_j, \dot{q}_j\}$  for a KCL circuit, with  $i \neq j$ ; the variable set is determined by the primary set of constraints associated with KVLs or KCLs and, possibly, any necessary reduction constraints associated with the KCLs for nodes connected with auxiliary circuit elements when the primary constraints are KVLs or the KVLs for loops containing auxiliary circuit elements when the primary constraints are KCLs (see below). The transformations required to find the circuit's Hamiltonian are then

$$\left\{ \begin{array}{l} \frac{\partial}{\partial \dot{\phi}_i} \mathcal{E}_{\text{tot}}(\phi_i, \dot{\phi}_i; q_j, \dot{q}_j) = q_i \end{array} \right. \quad (13a)$$

$$\left\{ \begin{array}{l} \frac{\partial}{\partial \dot{q}_j} \mathcal{E}_{\text{tot}}(\phi_i, \dot{\phi}_i; q_j, \dot{q}_j) = -\phi_j \end{array} \right. \quad (13b)$$

The relationship between the  $j$  and  $i$  indexes for a KVL circuit and between the  $i$  and  $j$  indexes for a KCL circuit are found by integrating in time the KVL or KCL relations, respectively. It is rather easy to write this formally for a KCL circuit,

$$A_{ni} q_i + \sum_{\substack{j=1 \\ j \neq i}}^{b-1} A_{nj} q_j = \tilde{q}_i, \quad (14)$$

where  $A_{nb}$  is the element for node  $n$  and branch  $b$  of  $\mathbf{A}$  and  $\tilde{q}_i$  is a constant of integration. A similar system of equations applies for a KVL circuit.

Now that we are acquainted with the method, we use it to solve a *non-conservative circuit*, i.e., a circuit with noisy resistors. Irrespective of the circuit's resistive nature, to further extend our method we purposely choose a circuit that results in an incomplete set of canonical coordinates. We conjecture that any circuit of this class requires the inclusion of an *auxiliary circuit element* (in real applications, this could be a parasitic element; for the purposes of this theory, auxiliary circuits are “mathematical tools” that we need initially and, then, eliminate by reduction) in correspondence to the missing coordinate to complete the set. We then show a reduction that allows us to eliminate the coordinate(s) associated with the auxiliary element.

Figure 2 (a) shows the physical circuit of a pair of resonators consisting of the parallel connection of inductors with inductance  $L_1$  or  $L_6$  and capacitors with capacitance  $C_4$  or  $C_9$ ; the two resonators are coupled by means

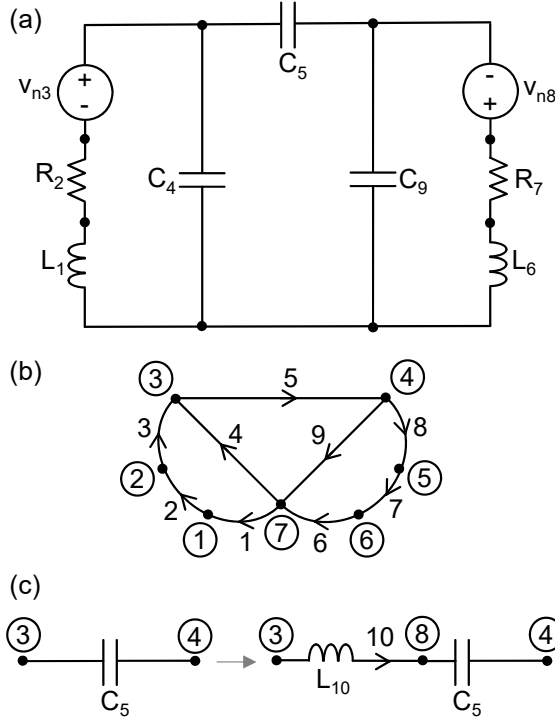


FIG. 2. (a) Capacitively coupled resonators with noisy resistors. (b) Digraph. (c) Auxiliary circuit element.

of a capacitor with capacitance  $C_5$ . The inductors are assumed to be connected in series with noisy resistors; following Nyquist [8], each noisy resistor is modelled as a noiseless resistor with resistance  $R_2$  for  $L_1$  and  $R_7$  for  $L_6$  in series with a noise source (Helmholtz-Thévenin equivalent circuit) of root mean square voltage  $v_{n3} = \sqrt{4k_B T R_2 \Delta f}$  and  $v_{n8} = \sqrt{4k_B T R_7 \Delta f}$  (where  $k_B$  is the

Boltzmann constant,  $T$  the circuit's thermodynamic temperature, and  $\Delta f$  a given frequency bandwidth assuming additive white Gaussian noise). To avoid a cumbersome calculation, without a significant loss of generality, we assume all the capacitors to be ideal circuit elements, i.e., with negligible resistance. In general, *any inductor should be accompanied by a series noisy resistor and any capacitor by a parallel noisy resistor*.

Figure 2 (b) illustrates the digraph for the circuit in Fig. 2 (a). In this case,  $n = 7$  and  $b = 9$  and, thus,  $D_i = 3$ ,  $D_v = 6$ , and  $D = D_i = 3$ . Even though it is tempting to use KVL due to the capacitive network embedded in the circuit,  $D = D_i$  prescribes the usage of KCL. It is worth noting that not using KVL does not result in a loss of information, since the entire topology of the circuit is already built in the incidence matrix  $\mathbf{A}$  used in KCLs. Note that, when neglecting the noisy resistors in the circuit of Fig. 2 (a),  $D = D_v = 2$ . In that case, our method prescribes to use KVL, clearly showing the duality in the usage of KCLs and KVLs depending on the circuit topology.

The circuit of Fig. 2 is characterized by a total power  $\mathcal{P} = \mathcal{P}^{(c)} + \mathcal{P}^{(nc)}$ , where  $\mathcal{P}^{(c)}$  and  $\mathcal{P}^{(nc)}$  are the *conservative* and *non-conservative* power, respectively. The powers dissipated in the noiseless resistors add up to form  $\mathcal{P}^{(nc)}$ ; all the other circuit elements are conservative and their power can be trivially integrated in time.

Using KCL at nodes ① and ② as well as ⑤ and ⑥ and noting that the power associated with each voltage noise,  $-v_{n3}(dq_1/dt)$  and  $-v_{n8}(dq_6/dt)$  (the minus sign is due to the standard convention to invert a voltage source sign compared to its branch current), can be readily integrated in time to obtain the corresponding energies,  $-v_{n3}q_1$  and  $-v_{n8}q_6$ , the total conservative energy of the circuit is

$$\mathcal{E} = \frac{1}{2}L_1 \dot{q}_1^2 - v_{n3}q_1 + \frac{1}{2}C_4 \dot{\phi}_4^2 + \frac{1}{2}C_5 \dot{\phi}_5^2 + \frac{1}{2}C_9 \dot{\phi}_9^2 + \frac{1}{2}L_6 \dot{q}_6^2 - v_{n8}q_6. \quad (15)$$

Considering that  $D = 3$  and we are using KCL, we expect to have three independent branch currents in  $\mathcal{E}$ . However, we only have two independent currents in Eq. (15). We must add an *auxiliary circuit element* to find the third independent current. In order to choose where to add the auxiliary element and what type of element to add, we first perform the transformation of Eq. (13a) for the three capacitive elements in Eq. (15) and integrate in time KCL at nodes ③ and ④ as pre-

scribed by Eq. (14); we find

$$\begin{cases} C_4 \dot{\phi}_4 = q_4 = q_5 - q_1 + \tilde{q} \end{cases} \quad (16a)$$

$$\begin{cases} C_5 \dot{\phi}_5 = q_5 \end{cases} \quad (16b)$$

$$\begin{cases} C_9 \dot{\phi}_9 = q_9 = q_5 - q_6 + \tilde{q} \end{cases} \quad (16c)$$

Clearly, the missing current is  $\dot{q}_5$ . It is well known that any capacitor is characterized by a series parasitic inductor. Therefore, we add an auxiliary inductor with inductance  $L_{10}$  in series with  $C_5$ , as shown in Fig. 2 (c). It is worth noting that the addition of  $L_{10}$  preserves  $D = D_i = 3$ .

Note that if we have to include an auxiliary element for an inductor, we would add a parallel capacitor; for a resistive wire, a series inductor (or vice versa); for a resistor, a parallel capacitor, with this parallel connection in series with an inductor; for a transformer as in Fig. 1 (a), a pair of capacitors connecting the left and right circuits above and below [10]; etc. However, in some cases the auxiliary circuit element does not have to necessarily correspond to a parasitic element: It can simply be a “mathematical” auxiliary element that we then attempt to eliminate by means of a reduction.

By means of KCL at node ⑧, we find  $q_5 = q_{10} + \bar{q}$  (where  $\bar{q}$  is a constant charge). We can thus rewrite

---


$$\mathcal{H} = \frac{\phi_1^2}{2L_1} - v_{n3}q_1 + \frac{(q_{10} - q_1 + \bar{q})^2}{2C_4} + \frac{\phi_{10}^2}{2L_{10}} + \frac{(q_{10} + \bar{q})^2}{2C_5} + \frac{(q_{10} - q_6 + \bar{\bar{q}})^2}{2C_9} - v_{n8}q_6 + \frac{\phi_6^2}{2L_6} . \quad (19)$$


---

Since both  $q_1$  and  $q_6$  interact with  $q_{10}$ , as expected there is an effective interaction between  $q_1$  and  $q_6$  (i.e., between the two resonators).

While it is true that a physical parasitic inductor  $L_{10}$  leads to a circuit with three canonical coordinates, it is unsettling not to be able to reduce the original circuit of Fig. 2 (a) to just two canonical coordinates. In fact, the original circuit represents two simple capacitively-coupled (dissipative) harmonic oscillators. Thus, we would expect only two degrees of freedom and therefore two canonical coordinates.

We can attempt to eliminate the additional coordinate associated with the auxiliary harmonic oscillator  $L_{10}C_5$  by either obtaining the three KVLs from Eq. (19) and using the KVL for the central loop (formed by the three capacitors) or by writing down this KVL by inspection. Since the final result is the same, we choose the latter method as it requires fewer calculations. In order to select the proper extra KVL, we consider the circuit of 2 (a) with the addition of the auxiliary circuit element, as shown in Fig. 2 (c).

The KVL required for the reduction is the one involving the auxiliary element,

$$v_4 + v_5 + v_{10} + v_9 = 0 . \quad (20)$$

Eqs. (16a), (16b), and (16c) as

$$\begin{cases} C_4 \dot{\phi}_4 = q_{10} - q_1 + \bar{q} \end{cases} \quad (17a)$$

$$\begin{cases} C_5 \dot{\phi}_5 = q_{10} + \bar{q} \end{cases} \quad (17b)$$

$$\begin{cases} C_9 \dot{\phi}_9 = q_{10} - q_6 + \bar{\bar{q}} , \end{cases} \quad (17c)$$

where  $\bar{\bar{q}} = \bar{q} + \bar{q}$  and  $\bar{\bar{q}} = \bar{q} + \bar{q}$ .

Due to the addition of  $L_{10}$ , we must include an extra energy term  $L_{10}\dot{q}_{10}^2/2$  to  $\mathcal{E}$ . The transformations of Eq. (13b) for the three inductive elements read

$$\begin{cases} L_1 \dot{q}_1 = -\phi_1 \end{cases} \quad (18a)$$

$$\begin{cases} L_{10} \dot{q}_{10} = -\phi_{10} \end{cases} \quad (18b)$$

$$\begin{cases} L_6 \dot{q}_6 = -\phi_6 . \end{cases} \quad (18c)$$

By inverting Eqs. (17a), (17b), (17c), (18a), (18b), and (18c) to find the generalized velocities as a function of the complete canonical-coordinate set  $\{\phi_1, \phi_{10}, \phi_6; q_1, q_{10}, q_6\}$  and substituting the results into  $\mathcal{E}$ , we obtain the circuit's Hamiltonian

---

Inserting the constitutive relations for the various elements and taking the limit for  $L_{10} \rightarrow 0^+$  (short-circuit condition), this constraint becomes

$$\begin{aligned} \text{KVL } 10 &= \lim_{L_{10} \rightarrow 0^+} \left( \frac{q_4}{C_4} + \frac{q_{10}}{C_5} + \frac{q_9}{C_9} + L_{10} \ddot{q}_{10} \right) \\ &= \frac{q_4}{C_4} + \frac{q_{10}}{C_5} + \frac{q_9}{C_9} = 0 . \end{aligned} \quad (21)$$

This is an holonomic constraint that allows us to reduce the canonical coordinates from three to two by eliminating  $q_{10}$ :

$$q_{10} = \frac{q_1}{\tilde{C}_4} + \frac{q_6}{\tilde{C}_9} , \quad (22)$$

where  $\tilde{C}_4 = \alpha C_4$ ,  $\tilde{C}_9 = \alpha C_9$ , and  $\alpha = (1/C_4 + 1/C_5 + 1/C_9)$ .

We now insert the constraint of Eq. (22) into Eq. (19), set the inductive energy of  $L_{10}$  to zero (short-circuit limit), set  $v_{n3} = v_{n8} = 0$  for simplicity, and assume  $\bar{q} = \bar{\bar{q}} = \bar{\bar{q}} = 0$ , we find the reduced Hamiltonian

$$\tilde{\mathcal{H}} = \frac{\phi_1^2}{2L_1} + \frac{\left(\frac{q_1}{\bar{C}_4} + \frac{q_6}{\bar{C}_9} - q_1\right)^2}{2C_4} + \frac{\left(\frac{q_1}{\bar{C}_4} + \frac{q_6}{\bar{C}_9}\right)^2}{2C_5} + \frac{\left(\frac{q_1}{\bar{C}_4} + \frac{q_6}{\bar{C}_9} - q_6\right)^2}{2C_9} + \frac{\phi_6^2}{2L_6} . \quad (23)$$

The total non-conservative power cannot be integrated in time using the usual stratagems used for all conservative circuit elements. Hence, we describe all non-conservative elements by means of their power instead of their energy. For the circuit in Fig. 2, from KCL at nodes ① and ⑥ and Ohm's law,  $v_2 = R_2 v_1$  and  $v_7 = R_7 v_6$ , the total non-conservative power reads

$$\mathcal{P}^{(\text{nc})} = v_2 v_1 + v_7 v_6 = R_2 \dot{q}_1^2 + R_7 \dot{q}_6^2 , \quad (24)$$

which confirms Joule-Lenz law (Joule's first law) for each resistor.

From classical mechanics [11] and Tellegen's theorem

$$\frac{d}{dt} \mathcal{H} + 2\mathcal{D} = \frac{d}{dt} \mathcal{H} + \mathcal{P}^{(\text{nc})} = 0 , \quad (25)$$

where  $\mathcal{D} = \mathcal{P}^{(\text{nc})}/2$  is the Rayleigh dissipation function. Assuming ohmic resistors (i.e., isotropic, linear, and homogeneous resistive conductors),

$$\mathcal{D} = \sum_{\ell=1}^{N_r^+} \frac{1}{2} G_\ell (\dot{\phi}_\ell)^2 + \sum_{m=1}^{N_r^-} \frac{1}{2} R_m (\dot{q}_m)^2 , \quad (26)$$

where  $N_r^+, N_r^- \in \mathbb{N}$  are, respectively, the total number of resistors with conductance  $G_\ell$  and voltage  $\dot{\phi}_\ell$  and resistors with resistance  $R_m$  and current  $\dot{q}_m$ . The voltage  $\dot{\phi}_\ell \neq 0$  when using KVLs as primary constraints, whereas the current  $\dot{q}_m \neq 0$  when KCLs are the primary constraints. Typically, both  $\dot{\phi}_\ell$  and  $\dot{q}_m$  can be written in terms of the canonical coordinates identified when deriving the Hamiltonian. In certain cases, the resistor voltages or currents may require additional generalized velocities outside the set of those associated with the canonical coordinates. In these instances, it is necessary to perform a resistive reduction as elucidated in one example below.

For the circuit of Fig. 2 (a), we have

$$\mathcal{D} = \frac{1}{2} R_2 \dot{q}_1^2 + \frac{1}{2} R_7 \dot{q}_6^2 . \quad (27)$$

As expected, only terms with  $\dot{q}_k$  are present since we are using KCLs as primary constraints. In this case, the dissipative subnetwork can be written as a function of the canonical coordinates used in the reduced Hamiltonian of Eq. (23).

In order to write the circuit's equations of motion in presence of dissipation, we extend the concept of Poisson brackets [11] by defining a new tool, the *generalized Poisson brackets*. For any pair of canonical coordi-

nates  $(\phi_k, q_k)$ , they are

$$\left\{ \begin{aligned} \dot{q}_k &= \{(\mathcal{H}, \mathcal{D}), (q_k, \dot{q}_k)\} \\ &= \sum_k \left( \frac{\partial \mathcal{H}}{\partial q_k} \frac{\partial q_k}{\partial \dot{\phi}_k} - \frac{\partial \mathcal{H}}{\partial \dot{\phi}_k} \frac{\partial q_k}{\partial q_k} \right) \\ &\quad + \sum_k \left( \frac{\partial \mathcal{D}}{\partial \dot{q}_k} \frac{\partial \dot{q}_k}{\partial \dot{\phi}_k} - \frac{\partial \mathcal{D}}{\partial \dot{\phi}_k} \frac{\partial \dot{q}_k}{\partial \dot{q}_k} \right) \end{aligned} \right. \quad (28a)$$

$$\left\{ \begin{aligned} \dot{\phi}_k &= \{(\mathcal{H}, \mathcal{D}), (\phi_k, \dot{\phi}_k)\} \\ &= \sum_k \left( \frac{\partial \mathcal{H}}{\partial q_k} \frac{\partial \phi_k}{\partial \dot{\phi}_k} - \frac{\partial \mathcal{H}}{\partial \dot{\phi}_k} \frac{\partial \phi_k}{\partial q_k} \right) \\ &\quad + \sum_k \left( \frac{\partial \mathcal{D}}{\partial \dot{q}_k} \frac{\partial \dot{\phi}_k}{\partial \dot{\phi}_k} - \frac{\partial \mathcal{D}}{\partial \dot{\phi}_k} \frac{\partial \dot{\phi}_k}{\partial \dot{q}_k} \right) . \end{aligned} \right. \quad (28b)$$

After performing some algebra, the generalized Poisson brackets for the reduced Hamiltonian of Eq. (23) and for the dissipation function of Eq. (27) allow us to find, e.g., the dual KVL associated with the loop containing  $L_1$ ,  $R_2$ , and  $C_4$  [obtained by setting  $k = 1$  in Eqs. (28a) and (28b)]

$$\dot{q}_1 = -\frac{\phi_1}{L_1} \quad (29a)$$

$$\left\{ \begin{aligned} \dot{\phi}_1 &= \left[ \frac{1}{C_4} \left( \frac{1}{\bar{C}_4} - 1 \right)^2 + \frac{1}{C_5} \frac{1}{\bar{C}_4^2} + \frac{1}{C_9} \frac{1}{\bar{C}_4^2} \right] q_1 \\ &\quad + \left[ \frac{1}{C_4} \left( \frac{1}{\bar{C}_4} - 1 \right) \frac{1}{\bar{C}_9} + \frac{1}{C_5} \frac{1}{\bar{C}_4 \bar{C}_9} \right. \\ &\quad \left. + \frac{1}{C_9} \frac{1}{\bar{C}_4} \left( \frac{1}{\bar{C}_9} - 1 \right) \right] q_6 + R_2 \dot{q}_1 . \end{aligned} \right. \quad (29b)$$

Solving Eq. (29a) for  $\phi_1$ , deriving the result with respect to  $t$  and substituting into Eq. (29b), we finally find

$$L_1 \ddot{q}_1 + R_2 \dot{q}_1 - \frac{1}{C_4} \left( \frac{1}{\bar{C}_4} - 1 \right) q_1 - \frac{1}{C_4 \bar{C}_9} q_6 = 0 . \quad (30)$$

This is the same equation we would obtain by applying directly KVL to this loop and using the necessary KCL constraints and branches constitutive relations [12]. Similar equations are found for the other DOF variables, forming a system.

We now consider the highly dissipative circuit displayed in Fig. 3. For this circuit,  $D = D_i = 3 < D_v = 4$  and, thus, KCLs are the primary circuit laws, whereas KVLs the dual ones. By setting up KCLs, it is straightforward to obtain the three independent circuit currents, which are the currents on  $C_1$ ,  $R_4$ , and  $C_7$ ,  $\dot{q}_1$ ,  $\dot{q}_4$ , and  $\dot{q}_7$ .

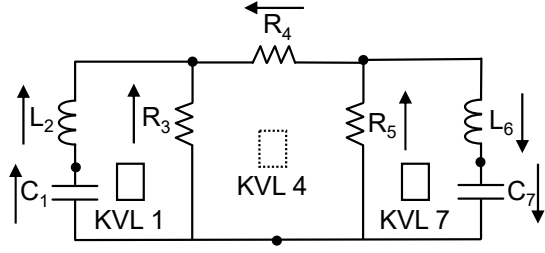


FIG. 3. Highly dissipative circuit. Each branch current is oriented in the same direction as the corresponding voltage. For simplicity, and without loosing generality, we neglect the fluctuation terms associated with each resistor. The solid-line boxes indicate the two KVLs dual to the primary KCLs. The dotted-line box shows the reduction KVL constraint.

Following the procedure outlined in the previous examples, the circuit Hamiltonian reads

$$\mathcal{H} = \frac{q_1^2}{2C_1} + \frac{\phi_1^2}{2L_2} + \frac{q_7^2}{2C_7} + \frac{\phi_7^2}{2L_6}. \quad (31)$$

Similarly, the dissipation function reads

$$\mathcal{D} = \frac{1}{2}R_3(\dot{q}_1 + \dot{q}_4)^2 + \frac{1}{2}R_4\dot{q}_4^2 + \frac{1}{2}R_5(\dot{q}_4 + \dot{q}_7)^2. \quad (32)$$

The circuit is characterized by an incomplete set of canonical coordinates due to the presence of the independent generalized velocity  $\dot{q}_4$  in  $\mathcal{D}$  and the absence of  $q_4$  and  $\phi_4$  in  $\mathcal{H}$ . In this case, however, it is not necessary to introduce any auxiliary circuit element because  $\mathcal{H}$  itself is “complete” with respect to the set of canonical coordinates  $\{\phi_1, \phi_7; q_1, q_7\}$ .

In presence of an auxiliary circuit, we would have attempted to perform a reduction by adding to the set of KCLs the dual KVL associated with a loop containing the auxiliary element. This time, instead, we perform the reduction by considering the KVL associated with the loop of three resistive branches,  $\dot{\phi}_3 - \dot{\phi}_4 - \dot{\phi}_5 = 0$ , which is the loop containing the “extra” current  $\dot{q}_4$ . Inserting the constitutive relation for each resistor, we obtain the reduction constraint

$$\dot{q}_4 = -\tilde{R}_3\dot{q}_1 - \tilde{R}_5\dot{q}_7, \quad (33)$$

where  $\tilde{R}_3 = R_3/\alpha$ ,  $\tilde{R}_5 = R_5/\alpha$ , and  $\alpha = R_3 + R_4 + R_5$ .

Inserting Eq. (33) into Eq. (32) we find the reduced dissipation function  $\tilde{\mathcal{D}}$ , which depends only on  $\dot{q}_1$  and  $\dot{q}_7$ . The generalized Poisson brackets for KVL 1 (the loop associated with KVL 1 is indicated in Fig. 3) then read

$$\left\{ \begin{aligned} \dot{q}_1 &= \{(\mathcal{H}, \tilde{\mathcal{D}}), (q_1, \dot{q}_1)\} = -\frac{\phi_1}{L_2} \\ \dot{\phi}_1 &= \{(\mathcal{H}, \tilde{\mathcal{D}}), (\phi_1, \dot{\phi}_1)\} \\ &= \frac{q_1}{C_1} + R_3(1 - \tilde{R}_3)\dot{q}_1 - R_5\tilde{R}_3\dot{q}_7. \end{aligned} \right. \quad (34a)$$

$$\left\{ \begin{aligned} \dot{q}_1 &= \{(\mathcal{H}, \tilde{\mathcal{D}}), (q_1, \dot{q}_1)\} = -\frac{\phi_1}{L_2} \\ \dot{\phi}_1 &= \{(\mathcal{H}, \tilde{\mathcal{D}}), (\phi_1, \dot{\phi}_1)\} \\ &= \frac{q_1}{C_1} + R_3(1 - \tilde{R}_3)\dot{q}_1 - R_5\tilde{R}_3\dot{q}_7. \end{aligned} \right. \quad (34b)$$

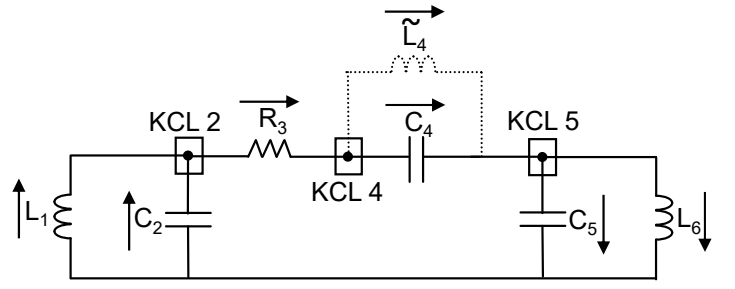


FIG. 4. Circuit with nonholonomic reduction.

The resulting equation of motion for the loop associated with KVL 1 is thus

$$\frac{q_1}{C_1} + L_2\ddot{q}_1 + R_3(1 - \tilde{R}_3)\dot{q}_1 - R_5\tilde{R}_3\dot{q}_7 = 0, \quad (35)$$

which is the same equation as obtained by circuit direct inspection. We leave to find the equation of motion for the loop associated with KVL 7 as an exercise (in fact, this is a good exercise to verify all the signs are correct).

We now turn to the circuit of Fig. 4. Before adding the auxiliary circuit element  $\tilde{L}_4$ , the circuit is characterized by  $D_i = D_v = 3$ . In such a degenerate case, we can use either KVLs or KCLs as primary constraints. In this case, we elect to use KVLs and find

$$\mathcal{H} = \frac{\phi_2^2}{2L_1} + \frac{q_2^2}{2C_2} + \frac{\phi_4^2}{2\tilde{L}_4} + \frac{q_4^2}{2C_4} + \frac{\phi_5^2}{2L_6} + \frac{q_5^2}{2C_5} \quad (36)$$

and

$$\mathcal{D} = \frac{1}{2} \frac{\dot{\phi}_2^2 + \dot{\phi}_4^2 + \dot{\phi}_5^2}{R_3}. \quad (37)$$

We could attempt to reduce the number of canonical coordinates to two by imposing KCL reduction constraints at nodes 4 and 5, KCL 4 and 5, and then impose the condition  $\lim \tilde{L}_4 \rightarrow +\infty$  (open circuit condition). However, these constraints form a nonholonomic system and, thus, cannot be used to perform the reduction.

In this case, we keep the auxiliary circuit elements in the unreduced Hamiltonian and find the equations of motion associated with all three (or as many as present in other similar circuits) canonical coordinates and impose the  $\lim \tilde{L}_4 \rightarrow +\infty$  for these equations at the end. This allows us to eliminate the auxiliary quantity  $\tilde{L}_4$  from the equations of motion. This is highly desirable as we do not want to necessarily quantify  $\tilde{L}_4$  to solve the problem.

Using our generalized Poisson equations, the equation of motion, e.g., for node 5 reads

$$\lim_{\tilde{L}_4 \rightarrow +\infty} \left( C_4\ddot{\phi}_4 + \frac{\phi_4}{\tilde{L}_4} + \frac{\dot{\phi}_2 + \dot{\phi}_4 + \dot{\phi}_5}{R_3} \right) = 0. \quad (38)$$

We finally consider a circuit consisting of a non-conservative  $L_r C_r R_r$  parallel resonator coupled by means

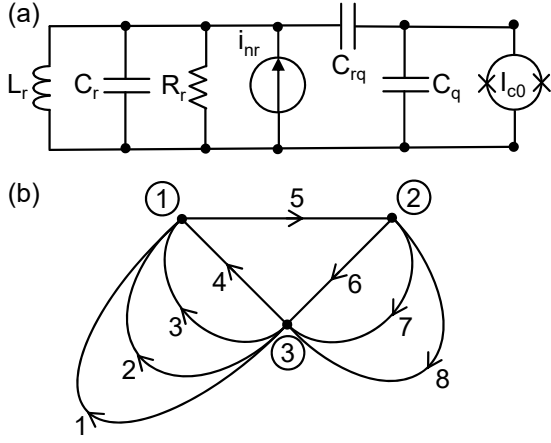


FIG. 5. (a) Non-conservative resonator capacitively coupled to transmon qubit. (b) Digraph.

of a capacitor with capacitance  $C_{rq}$  to (for simplicity) a conservative flux-tunable transmon qubit [13]. The transmon qubit is comprised of a capacitor with capacitance  $C_q$  connected in parallel with a SQUID [14]. The SQUID is realized as the parallel connection of two Josephson tunnel junctions with (for simplicity) equal critical current  $I_{c0}$  [14]. The circuit and its digraph are

$$\mathcal{E} = \frac{1}{2} L_r \dot{q}_1^2 + \frac{1}{2} C_r \dot{\phi}_2^2 + \frac{1}{2} C_{rq} (-\dot{\phi}_2 - \dot{\phi}_6)^2 + \frac{1}{2} C_q \dot{\phi}_6^2 + \mathcal{E}_J, \quad (41)$$

where  $\mathcal{E}_J$  is the Josephson energy.

In this case, the parallel conditions  $v_6 = v_7$  and  $v_7 = v_8$  become

$$\begin{cases} \phi_6 - \phi_7 = \tilde{\phi} \\ \phi_7 - \phi_8 = k_q \Phi_0, \end{cases} \quad (42a) \quad (42b)$$

with  $k_q \in \mathbb{Z}$ . Equation (42b) is a special case of the condition following from Faraday-Henry-Neumann's law and it is called *flux quantization condition*; this condition must be used in presence of any superconducting loop [15].

$$\mathcal{H}_{rq} = \frac{(\phi_2 + \tilde{\phi})^2}{2L_r} + \frac{1}{\det \mathbf{C}} \left[ \frac{C_q + C_{rq}}{2} q_2^2 + q_2 C_{rq} q_6 + \frac{C_r + C_{rq}}{2} q_6^2 \right] - 2E_{J0} \cos[k_J(\phi_6 - \tilde{\phi})], \quad (44)$$

with

$$\mathbf{C} = \begin{bmatrix} (C_r + C_{rq}) & C_{rq} \\ C_{rq} & (C_q + C_{rq}) \end{bmatrix}. \quad (45)$$

illustrated in Fig. 5. We first set  $R_r \rightarrow +\infty$  (open circuit) and, thus,  $i_{nr} = 0$ .

This nonlinear circuit is easy to treat due to the fact that the Josephson junctions are in parallel with a capacitor: This is equivalent to having a phase-controlled current source in parallel with a capacitor. If the junctions were in series with the capacitor, the circuit would have been significantly harder. We will discuss more general nonlinear circuits in a forthcoming article.

When neglecting the quasiparticle and “ $\cos \varphi$ ” terms, the constitutive relation (or Josephson equation) of the Josephson junction at branch  $u = 7, 8$  is

$$i(\phi_u) = I_{c0} \sin(k_J \phi_u) = I_{c0} \sin(\varphi_u), \quad (39)$$

where  $k_J = 2\pi/\Phi_0$  is the non-normalized Josephson constant and  $\varphi$  the gauge-invariant phase difference across the junction;  $\Phi_0 = h/(2e)$  is the superconducting magnetic flux quantum ( $h$  is the Planck's constant and  $e$  the electron charge).

From Faraday-Henry-Neumann's law, the voltage across each junction is given by

$$v_u = \dot{\phi}_u = \frac{\dot{\varphi}_u}{k_J}. \quad (40)$$

From the circuit digraph we find  $D = D_v = 2$ . Using KVL,

From simple algebra and trigonometric identities,

$$\begin{aligned} \mathcal{E}_J &= \int_0^t dt' \dot{\phi}_6 I_{c0} [\sin(k_J \phi_7) + \sin(k_J \phi_8)] \\ &= -2E_{J0} \cos[k_J(\phi_6 - \tilde{\phi})] + K_J, \end{aligned} \quad (43)$$

where  $E_{J0} = I_{c0}/k_J$  and  $K_{\text{SQUID}}$  is a constant of integration that hereafter we set to zero,  $K_{\text{SQUID}} = 0$ . Thus, the pair of junctions in the SQUID can be treated as a single effective junction with twice the Josephson energy of each junction. Flux tunability can be included by coupling inductively a current source to the SQUID loop.

Applying the transformations of Eqs. (13a) and (13b) to Eq. (41) and using the condition from KVL,  $\phi_1 = \phi_2 + \tilde{\phi}$ , the circuit Hamiltonian reads

Following a standard quantization procedure [16], the



classical canonical coordinates are promoted to quantum-mechanical operators as

$$\begin{cases} (\phi_2, \phi_6) \rightarrow (\hat{\phi}_2, \hat{\phi}_6) \\ (q_2, q_6) \rightarrow (\hat{q}_2, \hat{q}_6) = \left( -j\hbar \frac{\partial}{\partial \hat{\phi}_2}, -j\hbar \frac{\partial}{\partial \hat{\phi}_6} \right) \end{cases} \quad (46a) \quad (46b)$$

where  $j^2 = -1$  and  $\hbar = h/(2\pi)$ .

We now set  $C_{\text{rq}} = 0$ ,  $R_r \neq 0$  and finite, and consider only the resonator circuit. For this circuit,  $D = D_v = 1$  and from KVL and Eqs. (13a) and (13b) we find

$$\mathcal{H}_r' = \frac{(\phi_2 + \tilde{\phi})^2}{2L_r} + \frac{q_2^2}{2C_r} + \phi_2 \nu_{\text{nr}}. \quad (47)$$

Defining  $\mathcal{H}_{\text{nr}} = \phi_2 \nu_{\text{nr}}$ , we can write  $\mathcal{H}_r' = \mathcal{H}_r + \mathcal{H}_{\text{nr}}$ .

In this case,  $\mathcal{D} = \dot{\phi}_2^2/(2R_r)$ . The generalized Poisson bracket term  $(\partial/\partial \dot{\phi}_2)\mathcal{D} = -\dot{q}_3$  allows us to find the classical equation of motion

$$\dot{q}_2 = \{\mathcal{H}_r', q_2\} - \frac{\dot{\phi}_2}{R_r}. \quad (48)$$

Using the standard creation and annihilation operators  $\hat{a}^\dagger$  and  $\hat{a}$ ,  $\mathcal{H}_r = \hbar f_r (\hat{a}^\dagger \hat{a} + 1/2)$ , where  $f_r = 1/(2\pi\sqrt{L_r C_r})$ . Quantizing the Poisson brackets, Eq. (48) leads to the quantum Langevin equation

$$\dot{\hat{q}}_2 = \frac{1}{j\hbar} \left\{ [\hat{\mathcal{H}}_r, \hat{q}_2] + [\hat{\mathcal{H}}_{\text{nr}}, \hat{q}_2] \right\} - \frac{\dot{\phi}_2}{R_r}. \quad (49)$$

From the quantum version of Nyquist theorem and assuming a bosonic noise bath  $\hat{b}$  with small bandwidth  $\Delta f$  around  $f_r$ ,  $\hat{\nu}_{\text{nr}} = I_{\text{n0}}(\hat{b}^\dagger + \hat{b})$ , with  $I_{\text{n0}} = \sqrt{2\hbar f_r \Delta f / R_r}$  (see, e.g., Ref. [17]). Since  $\hat{\phi}_2 = \phi_0(\hat{a}^\dagger + \hat{a})$  and  $\hat{q}_2 = q_0 j(\hat{a}^\dagger - \hat{a})$ , with  $\phi_0 = \sqrt{L_r \hbar f_r / 2}$  and  $q_0 = \sqrt{C_r \hbar f_r / 2}$ , it is easy to prove that

$$\frac{1}{j\hbar} [\hat{\mathcal{H}}_{\text{nr}}, \hat{q}_2] = \frac{2\phi_0 I_{\text{n0}} q_0}{\hbar} (\hat{b}^\dagger + \hat{b}), \quad (50)$$

as expected.

In conclusion, we introduce a general method that, from a circuit's digraph, allows us to identify whether to use KCLs or KVLs. By integrating the circuit's power we find the energy, and by suitably transforming the energy the Hamiltonian. We show the necessity of auxiliary

circuit elements in presence of incomplete sets of canonical coordinates and two distinct procedures to eliminate them: Reduction at the Hamiltonian or dissipation function level or after obtaining the equations of motion. We outline a general method to account for noisy resistors. Finally, we present the quantum version of the previously introduced classical methods, including dissipation and fluctuations.

---

\* Corresponding author: [matteo.mariantoni@uwaterloo.ca](mailto:matteo.mariantoni@uwaterloo.ca)

- [1] D. A. Wells, Journal of Applied Physics **9**, 312 (1938), <https://doi.org/10.1063/1.1710422>.
- [2] B. M. Maschke, A. J. van der Schaft, and P. C. Breedveld, IEEE Transactions on Circuits and Systems I: Fundamental Theory and Applications **42**, 73 (1995).
- [3] G. Burkard, R. H. Koch, and D. P. DiVincenzo, Phys. Rev. B **69**, 064503 (2004).
- [4] U. Vool and M. Devoret, International Journal of Circuit Theory and Applications **45**, 897 (2017), <https://onlinelibrary.wiley.com/doi/pdf/10.1002/cta.2359>.
- [5] B. Yurke and J. S. Denker, Phys. Rev. A **29**, 1419 (1984).
- [6] J. A. Russer and P. Russer, in *2011 41st European Microwave Conference* (2011) pp. 1153–1156.
- [7] J. B. Johnson, Phys. Rev. **32**, 97 (1928).
- [8] H. Nyquist, Phys. Rev. **32**, 110 (1928).
- [9] C. W. Gardiner and M. J. Collett, Phys. Rev. A **31**, 3761 (1985).
- [10] L. O. Chua, C. A. Desoer, and E. S. Kuh, *Linear and Nonlinear Circuits* (McGraw-Hill, Inc., USA, 1987).
- [11] C. Cercignani, *Spazio, Tempo, Movimento. Introduzione alla Meccanica Razionale* (Nicola Zanichelli S.p.A., Bologna, Italy, 1976).
- [12] Note that it is straightforward to include the contribution from  $\nu_{\text{n3}}$  in Eq. (30).
- [13] R. Barends, J. Kelly, A. Megrant, D. Sank, E. Jeffrey, Y. Chen, Y. Yin, B. Chiaro, J. Mutus, C. Neill, P. O'Malley, P. Roushan, J. Wenner, T. C. White, A. N. Cleland, and J. M. Martinis, Phys. Rev. Lett. **111**, 080502 (2013).
- [14] A. Barone and G. Paternò, *Physics and Applications of the Josephson Effect* (John Wiley & Sons, Inc., USA, 1982).
- [15] M. Tinkham, *Introduction to Superconductivity - Second Edition* (Dover Publications, Inc., Mineola, New York USA, 1996).
- [16] R. Loudon, *The Quantum Theory of Light* (OUP Oxford UK, 2000).
- [17] M. Mariantoni, *New Trends in Superconducting Circuit Quantum Electrodynamics: Two Amplifiers, Two Resonators, and Two Photons - A not so Short Introduction to Quantum Circuits and Signals* (Shaker Verlag GmbH, Aachen, Germany, 2010).