

# Correction to Friis Noise Factors

Ankitha E. Bangera

*Department of Electrical Engineering,  
Indian Institute of Technology Bombay,  
Mumbai-400076, India*

E-mail: ankitha\_bangera@iitb.ac.in; ankitha.bangera@iitb.ac.in

## Abstract

The signal-to-noise ratio of a multistage cascade network is often estimated using Friis formulas for noise factors (or the noise figures in decibel). In this letter, the correct formulas to calculate the stage-wise noise factors and the total noise factor in terms of the stage-wise noise factors of an  $n$ -stage cascade network are derived. A comparison of our derived formulas for noise factors with Friis's formulas is presented. Contrary to Friis's total noise factor in terms of the stage-wise noise factors, we define the actual total noise factor of the  $n$ -stage cascade network as the product of its stage-wise noise factors.

## 1 Introduction

Cascade systems are widely used in various electrical and electronics engineering domains such as telecommunications and signal processing [1–7], circuits [8–16], networks and systems [17–20], solid-state devices [21–29], and so on. To extract the actual signal component at the output of these systems, it is critical to calculate its total noise factor ( $F_T$ ). Friis's formulas for noise are most commonly used to calculate the total noise factor of  $n$ -stage cascade networks [1–29].

In this letter, we briefly discuss the existing theory to calculate the noise factors of a cascade structure and the well-known Friis formulas for the stage-wise and the total noise factors of a cascade structure. We

then derive the correct formulas for the stage-wise noise factor and the total noise factor in terms of the stage-wise noise factors of  $n$ -stage cascade networks. Our derived formulas are then compared with Friis's formulas, with a discussion on the correction required to Friis noise factors.

## 2 Theory and Discussion

Fig. 1 shows the block diagram of an  $n$ -stage cascade network. From the block diagram,  $S_i$  is the input signal to the network from a source,  $N_i$  is the noise from the input source,  $M_x$  is the gain of the  $x$ -th stage,  $F_x$  is the noise factor at the  $x$ -th stage,  $N_{a(x)}$  is the added noise at the output of the  $x$ -th stage,  $\text{SNR}_{i(x)}$  is the input signal-to-noise ratio (SNR) of the  $x$ -th stage,  $\text{SNR}_{o(x)}$  is the output SNR of the  $x$ -th stage,  $\text{SNR}_i$  is the input SNR of the network,  $\text{SNR}_o$  is the output SNR of the network,  $S_o$  is the output signal of the network, and  $N_o$  is the output noise of the network.

### 2.1 Existing Noise Theory and Friis Noise Factors

The total noise factor of the  $n$ -stage cascade network ( $F_T$ ) is defined as the ratio of input SNR to output SNR [1,15,30]. Solving for  $F_T$  of the  $n$ -stage cascade network shown in Fig. 1, we get  $F_T$  as given by equation (1).

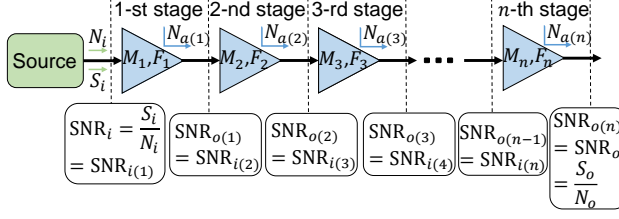


Figure 1: Block diagram of an  $n$ -stage cascade network.

$$\begin{aligned}
 F_T &= \frac{\text{SNR}_i}{\text{SNR}_o} = \left( \frac{\frac{S_i}{N_i}}{\frac{S_o}{N_o}} \right) \\
 &= \left( \frac{\left( \frac{S_i}{N_i} \right)}{\left( \frac{S_i \{ \prod_{x=1}^n M_x \}}{N_i \{ \prod_{x=1}^n M_x \} + \sum_{x=1}^n N_{a(x)} \{ \prod_{y=(x+1)}^n M_y \}} \right)} \right) \\
 &= 1 + \frac{N_{a(1)}}{N_i M_1} + \frac{N_{a(2)}}{N_i M_1 M_2} + \dots + \frac{N_{a(n)}}{N_i M_1 M_2 \dots M_n} \quad (1)
 \end{aligned}$$

According to Friis [1], the noise factor at the  $x$ -th stage of a cascade network is defined by,

$$F_x^{\text{Friis}} = 1 + \frac{N_{a(x)}}{N_i M_x}. \quad (2)$$

Substituting equation (2) in (1), we get,

$$\begin{aligned}
 F_T &= 1 + \underbrace{\frac{N_{a(1)}}{N_i M_1}}_{= F_1^{\text{Friis}}} + \underbrace{\frac{N_{a(2)}}{N_i M_1 M_2}}_{= (F_2^{\text{Friis}} - 1)/(M_1)} \\
 &\quad + \dots + \underbrace{\frac{N_{a(n)}}{N_i M_1 M_2 \dots M_n}}_{= (F_n^{\text{Friis}} - 1)/(\prod_{x=1}^{n-1} M_x)}. \quad (3)
 \end{aligned}$$

Therefore, Friis defines the total noise factor ( $F_T^{\text{Friis}}$ ) in terms of the stage-wise noise factors ( $F_x^{\text{Friis}}$ ) of an  $n$ -stage cascade network as [1, 4, 23],

$$F_T^{\text{Friis}} = F_1^{\text{Friis}} + \sum_{x=2}^n \left( \frac{F_x^{\text{Friis}} - 1}{\prod_{y=1}^{x-1} M_y} \right). \quad (4)$$

## 2.2 Correct Formulas for Noise Factors

For cascade networks, the output of the previous stage will be the input to the next stage. Therefore, the stage-wise noise factor must be equal to the ratio of SNR at the input of the stage to SNR at the output of the corresponding stage [1, 15, 30]. From the block diagram shown in Fig. 1, the noise factor at the  $x$ -th stage is,

$$F_x = \frac{\text{SNR}_{i(x)}}{\text{SNR}_{o(x)}} = \frac{\text{SNR}_{o(x-1)}}{\text{SNR}_{o(x)}}. \quad (5)$$

Solving equation (5) for the 1-st stage of the network, we obtain the 1-st stage noise factor ( $F_1$ ) same as that of Friis's 1-st stage noise factor ( $F_1^{\text{Friis}}$ ). However, for higher stages ( $x \geq 2$ ), the  $x$ -th stage noise factor will not be equal to the corresponding Friis's stage-wise noise factor. For illustration, considering the noise factor at the 2-nd stage of the network,

$$\begin{aligned}
 F_2 &= \frac{\text{SNR}_{i(2)}}{\text{SNR}_{o(2)}} = \frac{\text{SNR}_{o(1)}}{\text{SNR}_{o(2)}} \\
 &= \frac{\left( \frac{S_i M_1}{N_i M_1 + N_{a(1)}} \right)}{\left( \frac{S_i M_1 M_2}{N_i M_1 M_2 + N_{a(1)} M_2 + N_{a(2)}} \right)} \quad (6) \\
 &= \frac{N_i M_1 M_2 + N_{a(1)} M_2 + N_{a(2)}}{(N_i M_1 + N_{a(1)}) M_2} = \frac{N_{o(2)}}{N_{i(2)} M_2}.
 \end{aligned}$$

From equation (6), the stage-wise noise factor may also be defined as the ratio of the total noise at the output of the stage ( $N_{o(x)}$ ) to the total noise at its input ( $N_{i(x)}$ ) multiplied by the stage gain ( $M_x$ ). This definition does not agree with Friis's stage-wise noise factors. A comparison of the stage-wise noise factor for the 2-nd stage of the cascade network is shown in equation (7).

$$\begin{aligned}
 F_2 &= 1 + \frac{N_{a(2)}}{(N_i M_1 + N_{a(1)}) M_2} = \frac{N_{o(2)}}{N_{i(2)} M_2} = F_2^{\text{Cor}} \\
 &\neq \left( F_2^{\text{Friis}} = 1 + \frac{N_{a(2)}}{N_i M_2} \right) \quad (7)
 \end{aligned}$$

Therefore, the correct generalized formula for the stage-wise noise factor at the  $x$ -th stage ( $F_x^{\text{Cor}}$ ) must be,

$$F_x^{\text{Cor}} = \frac{N_{o(x)}}{N_{i(x)}M_x} = 1 + \frac{N_{a(x)}}{N_{i(x)}M_x} \\ = 1 + \frac{N_{a(x)}}{N_i \prod_{j=1}^x M_j + \sum_{k=1}^{(x-1)} \{N_{a(k)} \prod_{l=k+1}^x M_l\}}. \quad (8)$$

Comparing equations (2) and (8), the stage-wise noise factors will be ‘equal to one’ if the stage-wise added noises are ‘equal to zero’. Thus, if  $N_{a(x)} = 0$ , then,  $F_x = F_x^{\text{Cor}} = F_x^{\text{Friis}} = 1$ . However, if there exists a stage-wise added noise that is ‘greater than zero’ and ‘equal at all the stages’, then, a bar chart comparing the relative values of the stage-wise noise factors calculated using Friis formula (equation (2)) and our formula (equation (8)) for up to the 6-th stage is shown in fig. 2. Here, firstly it is observed that the 1-st stage noise factors calculated using Friis and our formulas are equal. Whereas, for higher stages, the noise factors calculated using Friis formula are greater than the corresponding stage-wise noise factors calculated using our formula. Secondly, the Friis stage-wise noise factor values remain the same for all stages if the stage-wise added noises are equal. However, our formula suggests that if all the stage-wise added noises are equal and greater than zero, then the stage-wise noise factors reduce with the stage number. This is because, as the stage number increases, the total noise at its input also increases. Thus, if  $\forall x = \{1, 2, \dots, n\} \exists N_{a(x)} > 0 \ni \{N_{a(1)} = N_{a(2)} = \dots = N_{a(n)}\}$ , then, (i)  $F_x^{\text{Friis}} = F_x^{\text{Cor}}$  for  $x = 1$  and  $F_x^{\text{Friis}} > F_x^{\text{Cor}}$  for  $x \geq 2$ ; (ii)  $F_1^{\text{Friis}} = F_2^{\text{Friis}} = \dots = F_n^{\text{Friis}}$ , whereas,  $F_1^{\text{Cor}} > F_2^{\text{Cor}} > \dots > F_n^{\text{Cor}}$ . Therefore, our formula for the stage-wise noise factor is a correction to Friis’s formula.

Moreover, the correct generalized formula for the stage-wise noise factor at the  $x$ -th stage in terms of the stage-wise noise factors of the previous stages is written as,

$$F_x^{\text{Cor}} = 1 + \frac{N_{a(x)}}{N_i \prod_{j=1}^x M_j \prod_{k=1}^{(x-1)} F_k^{\text{Cor}}}. \quad (9)$$

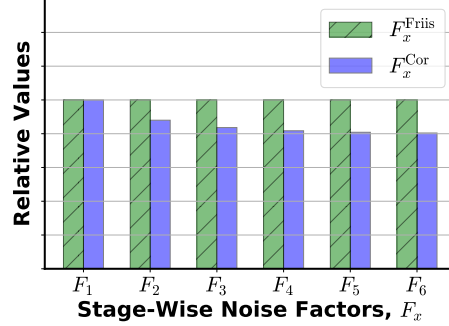


Figure 2: A comparison of Friis and our stage-wise noise factors for 1-st to 6-th stages, if there exists a stage-wise added noise that is ‘greater than zero’ and ‘equal at all the stages’.

Rearranging equation (9) and substituting it in equation (1) we get,

$$F_T = 1 + \underbrace{\frac{N_{a(1)}}{N_i M_1}}_{= F_1^{\text{Cor}}} + \underbrace{\frac{N_{a(2)}}{N_i M_1 M_2}}_{= (F_2^{\text{Cor}} - 1) F_1^{\text{Cor}}} \\ + \dots + \underbrace{\frac{N_{a(n)}}{N_i M_1 M_2 \dots M_n}}_{= (F_n^{\text{Cor}} - 1) \prod_{x=1}^{n-1} F_x^{\text{Cor}}}. \quad (10)$$

Therefore, the correct total noise factor of the  $n$ -stage cascade network ( $F_T^{\text{Cor}}$ ) in terms of the stage-wise noise factors ( $F_x^{\text{Cor}}$ ) is given by equation (11), which is not equal to equation (4).

$$F_T^{\text{Cor}} = \prod_{x=1}^n F_x^{\text{Cor}} \neq (F_T^{\text{Friis}}) \quad (11)$$

From equation (11), the actual total noise factor of the  $n$ -stage cascade network is defined as the product of the stage-wise noise factors.

### 3 Conclusion

We conclude that our derived formulas for the stage-wise noise factor for stages  $x \geq 2$  and the total noise factor in terms of the stage-wise noise factors of the

$n$ -stage cascade network are a correction to Friis's formulas.

## Acknowledgments

A.E.B. would like to thank the Indian Institute of Technology Bombay for their support.

## References

- [1] H.T. Friis. Noise figures of radio receivers. *Proc. IRE*, 32(7):419–422, 1944.
- [2] David Wake, Anthony Nkansah, and Nathan J. Gomes. Radio over fiber link design for next generation wireless systems. *J. Lightw. Technol.*, 28(16):2456–2464, 2010.
- [3] Bersant Gashi, Laurenz John, Dominik Meier, Markus Rösch, Sandrine Wagner, Axel Tessmann, Arnulf Leuther, Oliver Ambacher, and Rüdiger Quay. Broadband 400-GHz InGaAs mHEMT transmitter and receiver S-MMICs. *IEEE Trans. THz Sci. Technol.*, 11(6):660–675, 2021.
- [4] Won Namgoong and J. Lerdworatawee. Noise figure of digital communication receivers-revisited. *IEEE Trans. Circuits Syst. I, Reg. Papers*, 51(7):1330–1335, 2004.
- [5] M. E. Marhic. Quantum-limited noise figure of networks of linear optical elements. *J. Opt. Soc. Am. B*, 30(6):1462–1472, 2013.
- [6] J. Bromage. Raman amplification for fiber communications systems. *J. Light. Technol.*, 22(1):79–93, 2004.
- [7] C.K.S. Miller, W.C. Daywitt, and M.G. Arthur. Noise standards, measurements, and receiver noise definitions. *Proc. IEEE*, 55(6):865–877, 1967.
- [8] Ilias Pagkalos, Michelle L. Rogers, Martyn G. Boutelle, and Emmanuel M. Drakakis. A high-performance application specific integrated circuit for electrical and neurochemical traumatic brain injury monitoring. *ChemPhysChem*, 19(10):1215–1225, 2018.
- [9] Maissa Daoud, Mohamed Ghorbel, and Hassene Mnif. A low noise cascaded amplifier for the ultra-wide band receiver in the biosensor. *Sci. Rep.*, 11(1):22592, 2021.
- [10] M. Renger, S. Pogorzalek, Q. Chen, Y. Nojiri, K. Inomata, Y. Nakamura, M. Partanen, A. Marx, R. Gross, F. Deppe, and K. G. Fedorov. Beyond the standard quantum limit for parametric amplification of broadband signals. *npj Quantum Inf.*, 7(1):160, 2021.
- [11] H. A. Haus and J. A. Mullen. Quantum noise in linear amplifiers. *Phys. Rev.*, 128:2407–2413, 1962.
- [12] A.A. Abidi and J.C. Leete. De-embedding the noise figure of differential amplifiers. *IEEE J. Solid-State Circuits*, 34(6):882–885, 1999.
- [13] A. R. Aravinth Kumar, Bibhu Datta Sahoo, and Ashudeb Dutta. A wideband 2–5 GHz noise canceling subthreshold low noise amplifier. *IEEE Trans. Circuits Syst. II, Exp. Briefs*, 65(7):834–838, 2018.
- [14] Sining Zhou and M.-C.F. Chang. A CMOS passive mixer with low flicker noise for low-power direct-conversion receiver. *IEEE J. Solid-State Circuits*, 40(5):1084–1093, 2005.
- [15] H.A. Haus. The noise figure of optical amplifiers. *IEEE Photon. Technol. Lett.*, 10(11):1602–1604, 1998.
- [16] Yu-Tso Lin, Hsiao-Chin Chen, Tao Wang, Yo-Sheng Lin, and Shey-Shi Lu. 3–10-GHz ultra-wideband low-noise amplifier utilizing Miller effect and inductive shunt-shunt feedback technique. *IEEE Trans. Microw. Theory Techn.*, 55(9):1832–1843, 2007.
- [17] H. Rothe and W. Dahlke. Theory of noisy four-poles. *Proc. IRE*, 44(6):811–818, 1956.

- [18] H. Hashemi and A. Hajimiri. Concurrent multi-band low-noise amplifiers-theory, design, and applications. *IEEE Trans. Microw. Theory Techn.*, 50(1):288–301, 2002.
- [19] Michel T. Ivrlač and Josef A. Nossek. Toward a circuit theory of communication. *IEEE Trans. Circuits Syst. I, Reg. Papers*, 57(7):1663–1683, 2010.
- [20] Wenjun Sheng, A. Emira, and E. Sanchez-Sinencio. CMOS RF receiver system design: a systematic approach. *IEEE Trans. Circuits Syst. I, Reg. Papers*, 53(5):1023–1034, 2006.
- [21] A. van der Ziel, Y.J. Yu, G. Bosman, and C.M. Van Vliet. Two simple proofs of Capasso’s excess noise factor  $f_n$  of an ideal N-stage staircase multiplier. *IEEE Trans. Electron Devices*, 33(11):1816–1817, 1986.
- [22] F. Capasso, Won-Tien Tsang, and G.F. Williams. Staircase solid-state photomultipliers and avalanche photodiodes with enhanced ionization rates ratio. *IEEE Trans. Electron Devices*, 30(4):381–390, 1983.
- [23] A. Pilotto, P. Palestri, L. Selmi, M. Antonelli, F. Arfelli, G. Biasiol, G. Cautero, F. Driussi, R. H. Menk, C. Nichetti, and T. Steinhartova. A new expression for the gain-noise relation of single-carrier avalanche photodiodes with arbitrary staircase multiplication regions. *IEEE Trans. Electron Devices*, 66(4):1810–1814, 2019.
- [24] M. Teich, K. Matsuo, and B. Saleh. Excess noise factors for conventional and superlattice avalanche photodiodes and photomultiplier tubes. *IEEE J. Quantum Electron.*, 22(8):1184–1193, 1986.
- [25] Stephen D. March, Andrew H. Jones, Joe C. Campbell, and Seth R. Bank. Multistep staircase avalanche photodiodes with extremely low noise and deterministic amplification. *Nat. Photonics*, 15(6):468, 2021.
- [26] M. Sannino. Simultaneous determination of device noise and gain parameters through noise measurements only. *Proc. IEEE*, 68(10):1343–1345, 1980.
- [27] L.D. Nguyen, L.E. Larson, and U.K. Mishra. Ultra-high speed modulation-doped field-effect transistors: a tutorial review. *Proc. IEEE*, 80(4):494–518, 1992.
- [28] G. C. Messenger and C. T. McCoy. Theory and operation of crystal diodes as mixers. *Proc. IRE*, 45(9):1269–1283, 1957.
- [29] Y. Anand and W.J. Moroney. Microwave mixer and detector diodes. *Proc. IEEE*, 59(8):1182–1190, 1971.
- [30] H.A. Haus. *Electromagnetic Noise and Quantum Optical Measurements*. Advanced Texts in Physics. Springer-Verlag Berlin Heidelberg, Heidelberg, Germany, 2000.