

Transverse beam profiles

E. Bravin

CERN, Geneva, Switzerland

Abstract

The performance and safe operation of a particle accelerator is closely connected to the transverse emittance of the beams it produces. For this reason many techniques have been developed over the years for monitoring the transverse distribution of particles along accelerator chains or over machine cycles. The definition of beam profiles is explained and the different techniques available for the detection of the particle distributions are explored. Examples of concrete applications of these techniques are given.

Keywords

CERN Accelerator school; emittance; transverse profile; beam instrumentation

1 Introduction

Before discussing the details of beam profile measurements it is essential to understand what we mean by beam profiles. In the following sections the concepts of *transverse planes* and *beam profiles* will therefore be explained.

1.1 Coordinate system

First of all we need to define the coordinate system. What we usually call *beams* or *bunches* are in fact a collection of a very large number of particles whose centre of gravity moves in a well defined direction. In the ideal machine the average direction of motion of the particles is called the ideal orbit and in general passes through the centre of the focusing elements of the machine.

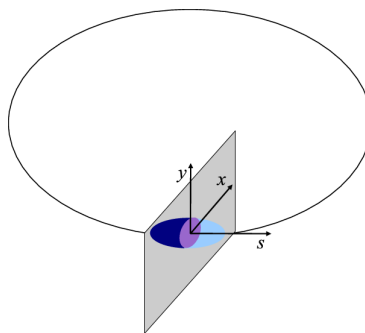


Figure 1: Reference coordinate system

Figure 1 shows a typical reference frame used in accelerators. The average direction of motion is used to define the longitudinal axis and is often called s . Once the s axis is defined we can define a plane orthogonal to it, this is the transverse plane. On this transverse plane we define the other two axes, one orthogonal to the plane containing the ideal orbit, this is the y axis or vertical axis and usually points upward, and one, the x or horizontal axis, orthogonal to the other two and forming with them a right-handed reference system.

1.2 Transverse geometrical space

In the previous section the concept of transverse plane was introduced, in this section we shall introduce the concept of the geometrical transverse space or x, y space.

Consider a transverse plane, every time a particle crosses this plane we take note of the x and y coordinates of the particle. We then transfer these points onto a 2D chart and obtain the particle distribution in the x, y space as shown in Fig. 2.

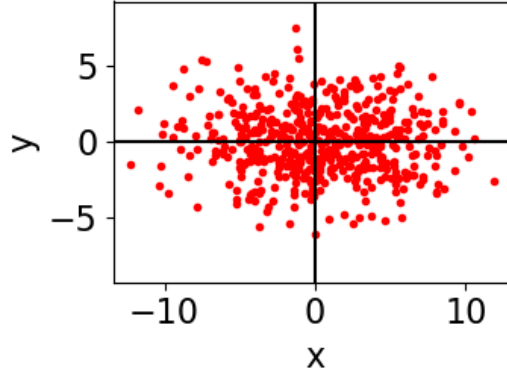


Figure 2: Particle distribution in the transverse x, y space

If there is no coupling between the motion of the particles in the x and in the y direction this distribution will be somehow elliptical with the axes of the ellipse parallel to the x and y axes.

1.3 Transverse phase space

As already mentioned before, a beam consists of many particles whose centre of gravity moves in a well defined direction describing the ideal orbit. In fact each particle of the beam moves in a slightly different direction, see Fig. 3, and focusing elements are necessary to keep the particles close together.

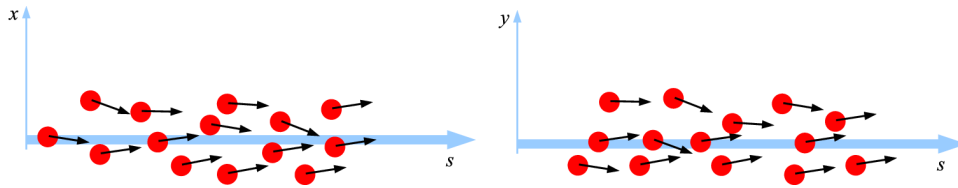


Figure 3: Each particle in a beam moves in a slightly different direction

The velocity vector of each particle can be decomposed into two components: one parallel to the beam direction s , and one orthogonal to it, the transverse velocity. The transverse velocity can in its turn be decomposed into two more components: one along x and one along y as shown in Fig. 4.

As in the previous exercise we can assume a transverse plane and this time when a particle crosses it we note not only the x and y positions, but also the transverse component of the momentum, p_x and p_y .

In the previous exercise we used one 2D chart to plot the points, this time we need two charts, on one we plot for each particle a point corresponding to the x position and the p_x momentum component, and on the second we do the same for the y components. For convenience we normalise the transverse momenta by the longitudinal momentum p_s with $x' = p_x/p_s$ and $y' = p_y/p_s$. Figure 5 shows a sketch

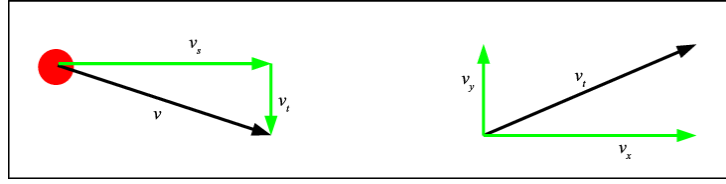


Figure 4: Decomposition of the velocity vectors into longitudinal and transverse components

of typical transverse phase space distributions together with the smallest ellipses that contain 95% of the particles.

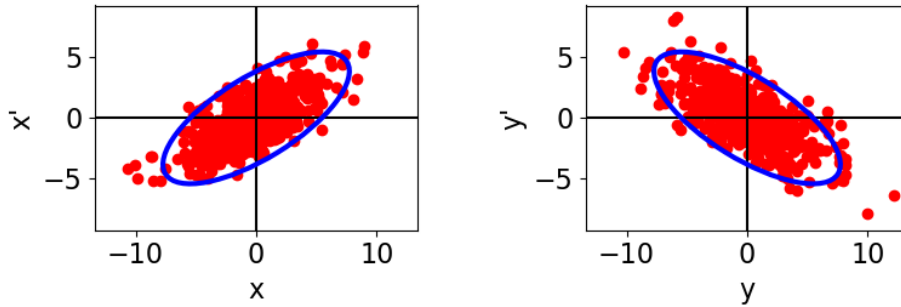


Figure 5: Particle distribution in the transverse phase spaces with the 95% confidence ellipses

The particle distributions in the phase space are again of elliptical shape, but this time the ellipses can be tilted. Moreover the area of the surface that contains all the particles is an invariant, this means that if the same exercise is repeated at several locations around the accelerator the ellipses will have different aspect ratios and different tilts, but the area will remain the same.

To avoid confusion it is worth clarifying that in a machine where there is no coupling between the x and y axes (ideal machine) the two phase space distributions are completely independent, and although the areas are invariant, the value is not necessarily the same for the x phase space and the y phase space.

Because these two areas are invariants of motion they constitute fundamental parameters that define the quality of the beam. These areas are called emittance and more precisely horizontal emittance, indicated with ε_x , and vertical emittance, indicated with ε_y . In reality there are several definitions of the emittance, but in practice all are related to the area of these ellipses.

It is worth mentioning that there are processes that can modify the transverse emittances of a beam, like acceleration, blow-up and cooling, but these topics are outside the scope of this lecture.

1.4 Differences between x, y space and *phase space*

As we have seen the x, y space and the phase space are different things and sometimes confusion arises between the two when one first starts studying this subject.

The x, y space only contains the spatial information of the distribution of the particles in a beam and merges both x and y axis in a single chart, while the two phase spaces x, x' and y, y' contain both the spatial and the velocity information.

The phase space contains the whole description of the state of all the particles for that particular plane (initial conditions) and this is all that is required for calculating the subsequent motion of the particle in the electromagnetic fields of the accelerator.

Despite being different things, there are also common points between the two spaces. In fact both

contain the position information and thus they have common projections. If one projects any of these 2D distributions along the x or y axis one obtains exactly the same thing. So the projection of the x, y space along x is the same thing as the projection of the x, x' space along x and the same can be said for y .

These common properties allow us to sample the beam distribution in one space and convert it to the other by using beam dynamics theories. This is of great importance as sampling the x, y space is much easier than sampling the phase space, although what one really needs is the phase space.

In practice the sampling of the phase space in a direct way is not technically feasible and it is always approximated by measuring a sequence of position distributions. Many different techniques, described in other lectures in this school, have been developed over the years to do this.

1.5 Beam profiles

Transverse beam profiles are simply histograms expressing the number of particles in a beam as a function of the transverse position, thus we have a horizontal profile expressing the number of particles at different x positions and we have a vertical profile expressing the number of particles at different y positions.

Theoretically these histograms could be considered as continuous functions expressing particle densities vs. position. In reality, given the discrete nature of particles and the discrete position binning of the sampling, any profile measurement consists of a 1D histogram. Considering the 2D distributions introduced early on, the profiles are simply the projections of these 2D plots along one axis.

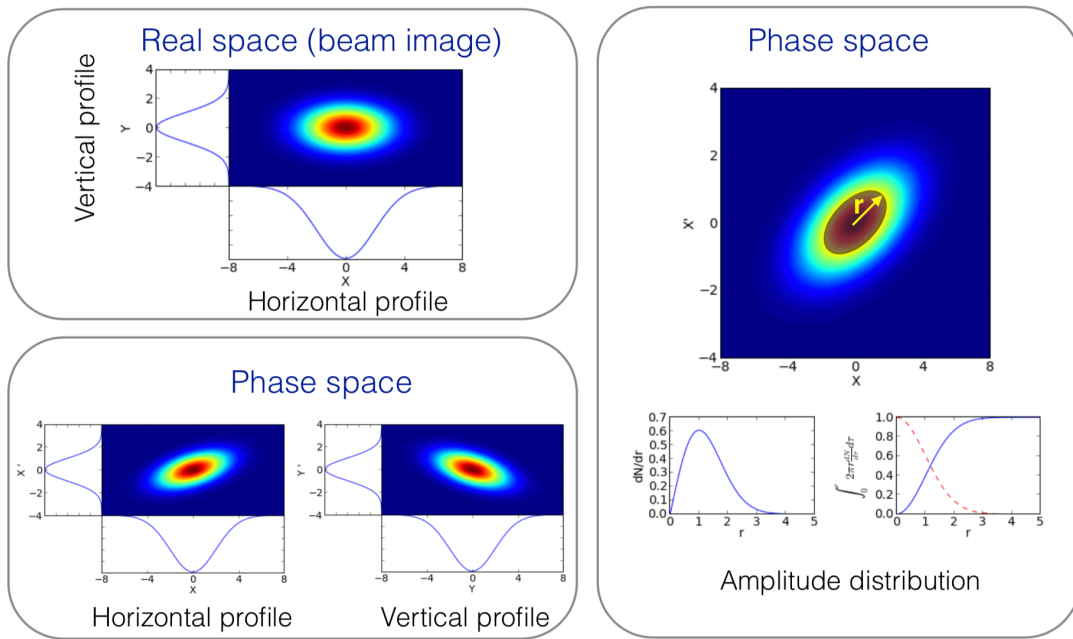


Figure 6: Different types of 2D distributions and relative transverse profiles: x, y transverse space (top left), transverse phase spaces (bottom left), transverse phase space with amplitude distribution profile (right).

In the continuous case we can define a 2-dimensional density function expressing the transverse distribution of the particles in the beam $i(x, y)$ and the profiles are simply given by

$$\text{Profile}_H(x) = \int_{-\infty}^{+\infty} i(x, y) dy, \quad (1)$$

$$\text{Profile}_V(y) = \int_{-\infty}^{+\infty} i(x, y) dx. \quad (2)$$

In a real case the integration limits can of course be reduced to the size of the beam pipe. Typically the particles are distributed according to the Gaussian function

$$i(x, y) = \frac{N_0}{2\pi\sigma_x\sigma_y} e^{-\left(\frac{x^2}{2\sigma_x^2} + \frac{y^2}{2\sigma_y^2}\right)}, \quad (3)$$

and thus we have

$$\text{Profile}_H(x) = \frac{N_0}{\sqrt{2\pi}\sigma_x} e^{-\frac{x^2}{2\sigma_x^2}}, \quad (4)$$

$$\text{Profile}_V(y) = \frac{N_0}{\sqrt{2\pi}\sigma_y} e^{-\frac{y^2}{2\sigma_y^2}}. \quad (5)$$

1.6 Normalised phase space and amplitude distribution

There is also another type of transverse profile that is sometimes used: it is called the amplitude distribution and it represents a distribution in the phase space. At a given location in a circular machine, turn after turn, a particle will evolve around a well defined ellipse in phase space. Different particles will describe different ellipses, all similar differing only by a scale factor the *amplitude*. It is thus possible to define the density of particles as a function of this amplitude (in case the ellipse degenerates to a circle the amplitude is nothing else than the radius).

This sampling of the amplitude density is usually performed using scrapers and requires recording either the beam losses or the beam current decrease as function of the scraper position while moving the scrapers into the beam. Figure 6 shows a sketch of the different 2D distributions and the relative profiles.

The distribution of the particles in phase space can generally be described by a tilted, by-dimensional, Gaussian function. For the calculation of the amplitude distribution it is convenient to apply simple transformations. We have already seen that for each particle we can define an ellipse in the phase space, as the particle moves along the accelerator this ellipse will evolve, but the area (emittance) will remain constant. By amplitude distribution we really mean the density of particles as function of their emittance ellipse and, by the invariant property of the emittance, it does not depend on the longitudinal position where we sample it. We can take advantage of this and apply a *rotation* of the phase space so that the major and minor axis of the ellipse become parallel to the new x, x' axes, this is accomplished by applying the transport matrix to an opportune location where we have a waist (can be a virtual location). Second we apply a scaling of the axes so that the ellipse becomes a circle, this is equivalent to applying a change of units (we can call these normalised units). In this new phase space it is easy to define the radial particle distribution and compute the amplitude distribution

$$i(x, x') = \frac{N_0}{2\pi\sigma_x\sigma_{x'}\sqrt{1-\rho^2}} e^{-\frac{1}{2(1-\rho^2)}\left(\frac{x^2}{\sigma_x^2} + \frac{x'^2}{\sigma_{x'}^2} - \frac{2\rho xx'}{\sigma_x\sigma_{x'}}\right)}, \quad (6)$$

$$i_{\text{waist}}(x, x') = \frac{N_0}{2\pi\sigma_x\sigma_{x'}} e^{-\frac{1}{2}\left(\frac{x^2}{\sigma_x^2} + \frac{x'^2}{\sigma_{x'}^2}\right)}, \quad (7)$$

$$i_{\text{waist normalised}}(x_n, x'_n) = \frac{N_0}{2\pi\sigma_n^2} e^{-\frac{x_n^2 + x_n'^2}{2\sigma_n^2}}, \quad (8)$$

$$r^2 = x_n^2 + x_n'^2, \quad (9)$$

$$i_{\text{waist normalised}}(r) = \frac{N_0}{2\pi\sigma_n^2} e^{-\frac{r^2}{2\sigma_n^2}}, \quad (10)$$

where ρ is the correlation coefficient between x and x' . We can now calculate the density of particles as function of the amplitude $dN(r)/dr$ and the amplitude distribution $I(r)$

$$\frac{dN(r)}{dr} = 2\pi i(r)r = \frac{N_0}{\sigma^2} r e^{-\frac{r^2}{2\sigma^2}}, \quad (11)$$

$$I(r) = \int_0^r \frac{N_0}{\sigma^2} \tau e^{-\frac{\tau^2}{2\sigma^2}} d\tau = N_0 \left(1 - e^{-\frac{r^2}{2\sigma^2}} \right). \quad (12)$$

2 Sampling of distributions

2.1 Intercepting vs. non-intercepting

The methods used to sample the distributions of particles in a beam can be divided into two main categories: intercepting and non-intercepting. As the names suggest, in the first group we have the methods that require placing an object on the beam path and analysing the signal produced by the interaction of the particles with the object, in the second group we have the methods that use signals emitted spontaneously by the beam. An exception to this definition is the laser wire scanner which is classified as non-intercepting even though it requires an external stimulus (laser beam), nevertheless, given the extremely small perturbation that this stimulus has on the beam, it is neglected. Among the intercepting techniques there are:

- scanning wires
- wire grids
- radiative screens

and among the non-intercepting:

- synchrotron light
- rest gas ionisation
- (inverse) Compton scattering
- photo dissociation

2.2 Interaction of particles with matter

The most used techniques for sampling profiles are based on intercepting methods; the understanding of the interactions between the particles and the obstacles used in the sampling is essential.

There are many physical effects that can be exploited for the detection:

- ionisation
 - creation of electron–ion pairs
 - secondary electron emission (SEM, low energy)
 - emission of photons
- elastic and inelastic scattering
 - dislocations

- production of secondary particles (high energy)
- Čerenkov radiation
- bremsstrahlung
- optical transition radiation (OTR)

2.2.1 Energy deposition

The study of the energy deposited by the particles in our *sensor* (the object or obstacle we introduce on the beam path) has two important uses:

- Signals are often proportional to the amount of energy deposited in the material (or more often the density of the energy deposition).
- The deposited energy can be dangerous for the *sensor* and can destroy it, again the total energy and the energy density are both important.

The quantity widely used to describe the energy deposition is the dE/dx . This quantity describes the amount of energy lost by a particle in traversing a unit length of material, often this quantity is normalised for the material density and the units become thus MeV cm²/g.

The mechanism of energy deposition by charged particles in matter in the range in which we are interested is well described by the Bethe–Bloch formula which gives the energy deposition density as a function of particle charge, particle momentum and material properties:

$$-\frac{dE}{dx} = Kz^2 \frac{Z}{A} \frac{1}{\beta^2} \left[\frac{1}{2} \ln \frac{2m_e c^2 \beta^2 \gamma^2 T_{max}}{I^2} - \beta^2 - \frac{\delta(\beta\gamma)}{2} \right]. \quad (13)$$

It should be mention that the Bethe–Bloch formula is not valid for electrons. Most of the interactions between the particles and the material happens in fact with the electrons inside the material so that in case the particle is an electron it is not possible to distinguish between the target and the projectile. For electrons other models or tabulated values should be used. The overall shape of the dE/dx function is however very similar to the Bethe–Bloch formula in the energy range we usually operate. Figure 8 shows the energy deposition curves for protons and electrons in aluminium, note that the energy scales are not the same.

Moreover the Bethe–Bloch formula does not describe the amount of energy deposited in the material, but the amount of energy lost by the primary particle. This has an important consequence for our purposes as often our *sensors* are very thin and absorb only a small fraction of the energy lost by the particle in traversing it. Think, for example, of the case of thin metallic foils traversed by high-energy electrons, many X-rays will be produced but only a negligible fraction of the energy of the X-rays will be reabsorbed in the foil.

The dE/dx curve (an example is shown in Fig. 7) has been found to be almost independent of the material properties and the particle type (for $q = \pm 1$ elementary particles) provided one uses the particle momentum and not the particle energy (it is the speed of the particle that matters in the ionisation process). The only parameter of the material important for the energy deposition is the density and it disappears if the dE/dx is normalised for it.

An important aspect to notice is that at low momentum the dE/dx is much larger, this means that for low-energy beams we can expect larger signals, but also more important thermal problems.

Looking at the dE/dx curve we notice that the dE/dx increases rapidly at very low particle energies, reaches a maximum for $\beta\gamma \sim 0.02$, then decreases rapidly and reaches a minimum for $\beta\gamma \sim 4$ (minimum ionising particle MIP); from there on it increases only slowly (not considering the radiative

part). As a reference, $\beta\gamma = 0.02$ corresponds to protons of 188 keV and electrons of 100 eV kinetic energy and $\beta\gamma = 4$ corresponds to protons of 2.9 GeV and electrons of 1.6 MeV kinetic energy. From these values it is clear that in the field of instrumentation for particle accelerators the relevant part of the dE/dx curve is the one described by the Bethe–Bloch (again excluding radiative effects) that is valid for $\beta\gamma > 0.05$.

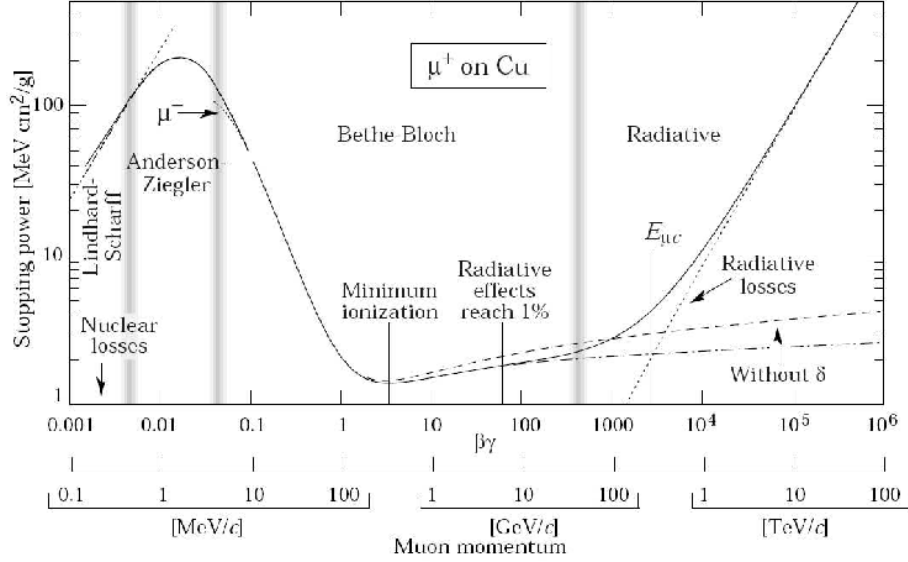


Figure 7: The dE/dx curve for positive muons in copper, the same curve describes very well other elementary particles with $q = 1$ and different materials. Note that the horizontal axis is given in terms of particle momentum and not particle energy. For reference, $\beta\gamma = 1$ corresponds to a kinetic energy of 212 keV for electrons and 390 MeV for protons.

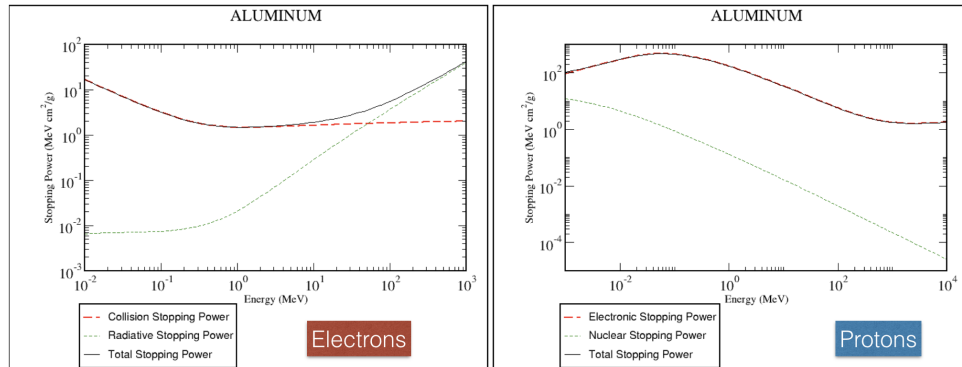


Figure 8: The dE/dx curve for electrons and protons in aluminium. Data from <https://physics.nist.gov>

The main process occurring when a charged particle traverses a material is the creation of electron–ion pairs and the creation of excited states in atoms. The electron–ion creation is often used to detect the passage of the particles, this is the case for example of ionisation chambers and solid–state detectors. In these cases a bias voltage is applied across the material in order to attract the positive and negative charges on opposite electrodes and measure the resulting current.

2.2.2 Secondary Emission (SEM)

In the ionisation process ion–electron pairs are produced all along the particle track, with a wide distribution of kinetic energy being transferred to the liberated electrons. In some cases the pairs are produced near the surface of the material and the electron has sufficient momentum and the right direction to reach the surface. If the energy of the electron is larger than the surface potential barrier it may escape in the surrounding vacuum as depicted in Fig. 9–a. This phenomenon can be amplified by biasing the material with a negative voltage, this will reduce the potential barrier at the surface and also prevent free electrons from being recaptured by the material.

Only a very thin layer near the surface of the material is involved in secondary emission, this means that it is not the bulk properties of the material that matter but the properties of the surface layer, commonly an oxide form of the bulk material that can be modified by the irradiation (ageing).

Usually SEM yields are measured experimentally for the different materials and different incident energies. Figure 10 shows such a measurement for protons on titanium and aluminium oxides together with the analytical predictions based on the model described in Ref. [1]. As you can see, the measured points fit very well with the prediction and nicely follow the dE/dx curve.

2.2.3 Scintillation

The ion–electron pairs produced by the passage of a charged particle will eventually recombine. When this recombination happens, the binding energy of the electron will be emitted in the form of electromagnetic radiation (photons). The passing primary particle will also excite atoms and molecules without ionising them, in this case, again, the return to the ground state is accompanied by the emission of photons, see Fig. 9–b. The de-excitation process can involve many meta-stable levels and only a few of the transitions will emit photons in a range suitable for observation, typically the visible range. The lifetime of the excited states can vary over a large range and the emission can thus span over relatively long periods and will depend on the properties of the material.

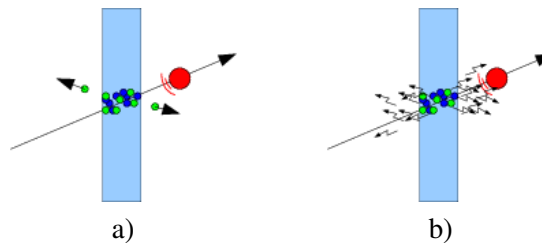


Figure 9: A charged particle crosses a material and leaves behind a track of ion–electron pairs. a) Free electrons created near the surface can have sufficient energy to reach the surface and escape the material. b) Excited atoms and molecules decay to lower levels emitting photons.

Special types of materials have been developed in order to obtain large light yields, these are usually referred to as phosphors and were primarily developed for the cathode ray tube industry. Table 1 gives the compositions and the decay times for a few widely used phosphor types while Fig. 11 shows the relative light emission spectra and emission efficiencies.

These phosphor materials have very large light yields, but can only be used as thin coatings on rigid substrates and can be easily damaged. Typical grain sizes for the coatings are of the order of the micron, this represents the ultimate resolution limit for the imaging device. These materials can only be used for very low intensity and low energy beams.

Ceramics materials, glasses, and crystals are much more frequently used in high–energy accelerators. The light yields are usually lower than for the phosphors, but the radiation hardness and thermo-mechanical properties are much better. A typical material widely used in accelerators is aluminium

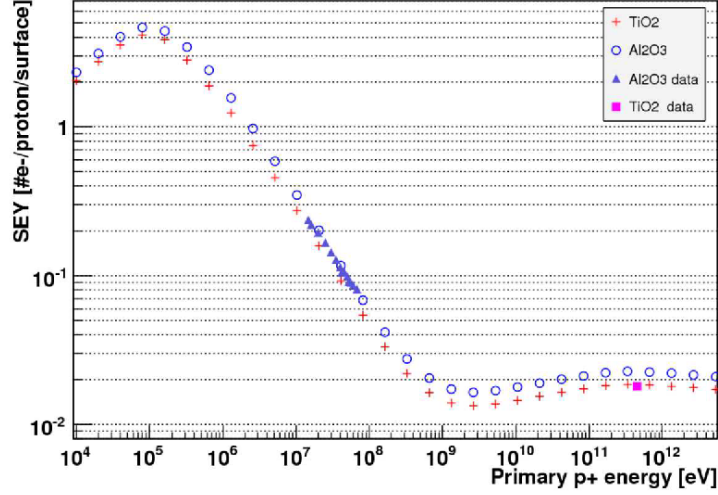


Figure 10: Calculated and measured secondary emission yield for protons in different materials as function of proton kinetic energy.

Table 1: Composition and decay times of typical phosphor materials

Type	Composition	Decay time (of light intensity)	
		From 90% to 10%	From 10% to 1%
P 43	Gd ₂ O ₂ S: Tb	1 ms	1.6 ms
P 46	Y ₃ Al ₅ O ₁₂ : Ce	300 ns	90 μs
P 47	Y ₂ SiO ₅ : Ce, Tb	100 ns	2.9 μs
P 20	(Zn, Cd)S: Ag	4 ms	55 ms
P 11	ZnS: Ag	3 ms	37 ms

oxide, also known as *alumina*, doped with chromium (*Chromox* Al₂O₃: Cr). This material is particularly robust and is well suited for the fabrication of beam observation screens. Another widely used material that associates high light yield, high spatial resolution and good thermo-mechanical properties is YAG Y₃Al₅O₁₂. In recent years a big effort has been made in order to improve the resolution of scintillating screens driven by the free-electron-laser light sources community. More details on scintillation and screens can be found in Ref. [5]

2.2.4 Čerenkov radiation

Čerenkov radiation is a form of electromagnetic radiation emitted by charged particles while moving inside a material. The emission process is linked to the polarisation of the material and only takes place when the particles' velocity is larger than the phase velocity of the light in that material. The threshold velocity is given by the formula

$$\beta_t = \frac{1}{n(\omega)}, \quad (14)$$

where $\beta_t = v_t/c$ is the threshold value of the relativistic speed factor and $n(\omega)$ is the wavelength-dependent refraction index of the material.

As the radiation is the result of the superposition of consecutive wave-fronts, the emission has a very particular angular distribution (see Fig. 12) with the photons emitted on the surface of a cone whose axis lies along the direction of motion of the particle and with aperture angle given by

$$\cos \theta_c = \frac{1}{n(\omega)\beta}. \quad (15)$$

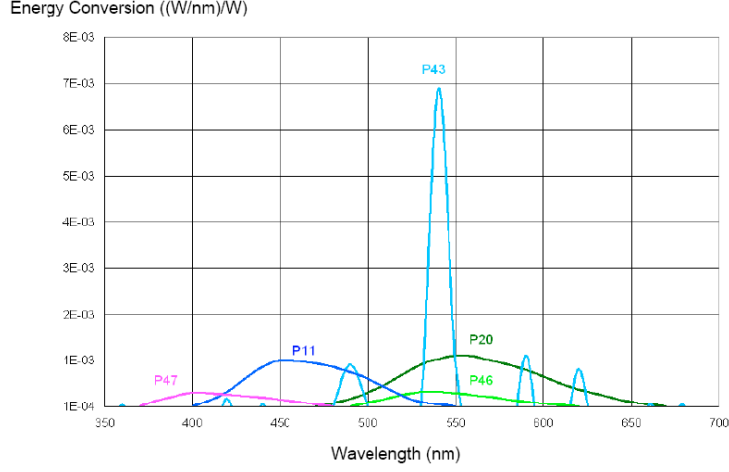


Figure 11: Light emission spectra of typical phosphor materials

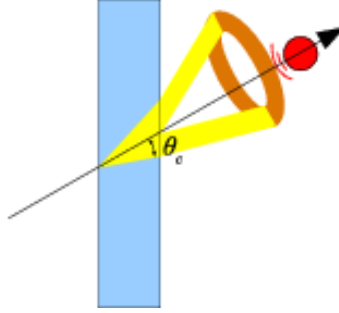


Figure 12: Čerenkov radiation is emitted by a particle travelling faster than the phase velocity of light in a material. The Čerenkov photons have a well defined angular distribution.

The emission spectrum of the radiation is given by

$$\frac{d^2 N}{dx d\omega} = \frac{\alpha z^2}{c} \sin^2 \theta_c(\omega) = \frac{\alpha z^2}{c} \left(1 - \frac{1}{\beta^2 n^2(\omega)} \right). \quad (16)$$

As an example of the intensity of the Čerenkov radiation, in the wavelength range $\lambda \in [400, 500]$ nm, 10 photons are generated by a relativistic electron ($\beta \sim 1$) crossing a 1 mm thick quartz plate ($n_{\text{quartz}} = 1.46$, $\theta_c \simeq 47^\circ$). Because of the weak emission, relatively thick Čerenkov radiators are required for beam imaging, this results in a limited spatial resolution. The light distribution at the exit surface consists of an ellipse obtained by the intersection of the Čerenkov emission cone of the particle at the entrance in the material and the plane of the exit surface. In diagnostic systems the angles between the radiator, the beam, and the detector need to be precisely aligned, for this reason it is important to take into consideration the refraction of the light at the exit surface. Figure 13 shows the property of the Čerenkov radiation emitted by electrons of varying energy in quartz.

2.2.5 Optical Transition Radiation (OTR)

Optical Transition Radiation, also known as OTR, is a form of electromagnetic radiation emitted by a charged particle when crossing a boundary between materials with different dielectric properties. In most practical cases this boundary consists in the separation between the vacuum of the beam pipe and a metallic foil. OTR has many similarities with bremsstrahlung; the primary charged particle induces a mirror charge on the surface of the foil travelling in the opposite direction. When the primary charge

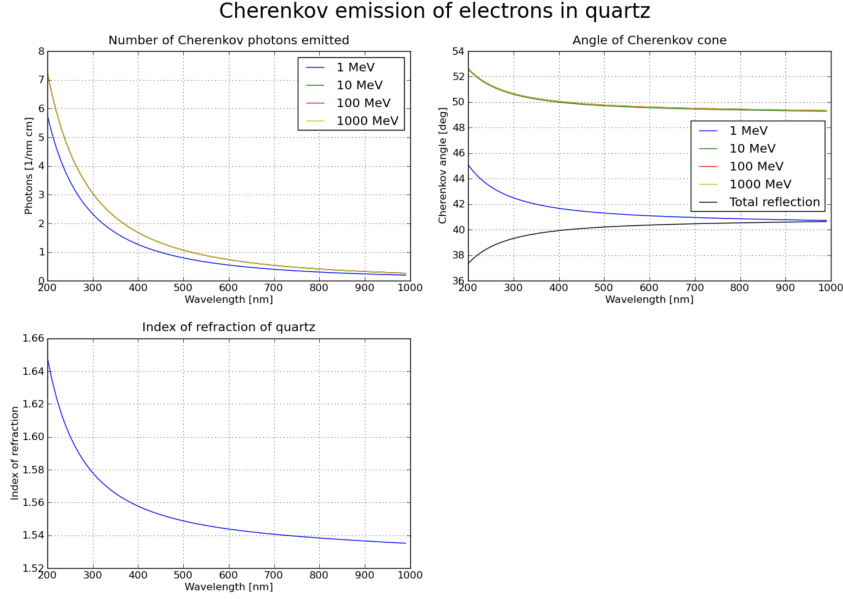


Figure 13: Čerenkov radiation emission by electrons of different energies in quartz. Emission intensity (top-left), emission cone angle (top-right) and index of refraction of quartz (bottom-left)

enters the material these two charges neutralise. The effect is the same as if the mirror charge had come to a sudden stop. This radiation is called the *backward emission* because it is emitted in the direction opposite to the direction of the particle; more precisely, the radiation is emitted along the direction of the specular reflection of the beam on the surface.

Similarly radiation is emitted when the primary particle exits the foil, in this case it is the sudden appearance of the real charge that emits the radiation called the *forward emission*, always emitted in the direction of the particle independently of the angle between the particle and the surface.

OTR has a complicated angular distribution, a simplified description for $\gamma \gg 1$ of the case of the boundary between vacuum and a material with infinite ε_r it is given by the formula

$$\frac{d^2W}{d\Omega d\omega} \approx \frac{Nq^2}{\pi^2 c} \left(\frac{\theta}{\gamma^{-2} + \theta^2} \right). \quad (17)$$

The angular distribution corresponds to a thick walled cone of aperture angle $1/\gamma$ and the emission is characterised by a wide flat spectrum. For practical cases of metallic foils in vacuum (or air) one can still use this formula as the ε_r of metals is very large for frequencies up to the plasma frequency of the material ω_p (which is linked to the density of electrons in the material). Figure 14(a) shows the geometry of the emission while Fig. 14(b) shows the angular distribution, note the maximum at $1/\gamma$.

In optical transition radiation the thickness of the radiator has no influence on the emitted radiation, it is thus possible to use very thin foils as radiators so that the perturbation to the beam is minimal. Similarly foils of materials with good thermo-mechanical properties can be used for the imaging of high density beams.

Another interesting characteristic of this type of radiation is that it is radially polarised, i.e., the polarisation vector of the photons lies in the plane defined by the beam path (or its specular reflection for the backward emission) and the direction of the photons. The angular distribution of OTR has a strong dependency on the energy of the particle and more precisely on the relativistic factor γ . The intensity of the radiation is also influenced by the energy in a complicated way. The complete model describing this type of radiation can be found in Refs. [2] and [3]. A simple description of the dependency of the total

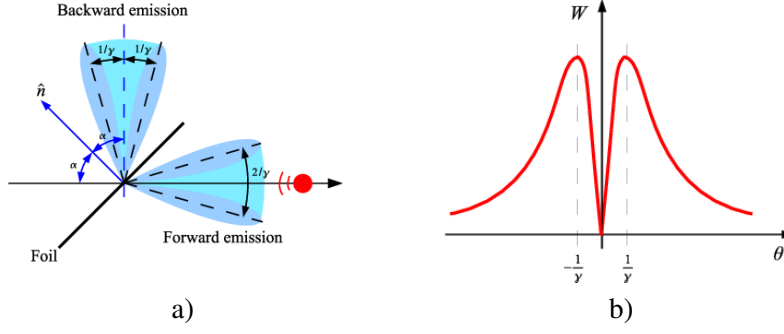


Figure 14: OTR radiation is emitted by a particle crossing a boundary between materials with different dielectric properties (a). Angular distribution of the OTR photons (b).

OTR power as a function of the particle energy is given by

$$W \propto \begin{cases} \beta^2 & \beta \ll 1 \\ \ln 2\gamma & \gamma \gg 1 \end{cases} . \quad (18)$$

For the wavelength range $\lambda \in [400, 600]$ nm, an accurate calculation using the complete OTR model predicts ~ 0.3 OTR photons per electron for 50 MeV electrons ($\beta = 1$, $\gamma = 98.8$) and ~ 0.001 photons per electron for 100 keV electrons ($\beta = 0.55$, $\gamma = 1.2$).

For the *backward* emission there is one more important issue. The emission process can be seen as if the photons are created in the direction of the primary particle just before the particle crosses the surface of the foil and are then immediately reflected by the surface of the foil. In the reflection mechanism the properties of the surface are essential in defining the intensity, the spectrum, and the direction of the out coming photons. If the surface is not perfectly flat this will distort the particular angular distribution, in the extreme case of a very rough surface the backward emission can become isotropic. The radiation spectrum is also affected as there is a cut-off frequency at which the surface does not reflect any more, generally the resulting spectrum will be given by the convolution of the *primary* radiation and the wavelength-dependent reflection coefficient.

Another important aspect of OTR is the coherent emission. When the beam is bunched in very short packets like in free electron laser LINACs, the particles emit with the same phase and the intensity of the emission does no longer scale linearly with the beam intensity. In the extreme case of a very short bunch the total radiation intensity would be proportional to the square of the number of particles N^2 in the bunch instead of N see Ref. [4]. For this reason OTR can not be used in certain cases. The free electron laser community had to revert to using scintillating screens in order to overcome this issue.

2.2.6 Synchrotron radiation

An effect that is not properly an interaction of charged particles with matter, but is very important in transverse profile measurements, is synchrotron radiation. From classical electrodynamic theory we know that when a charged particle is accelerated it emits electromagnetic radiation, *bremsstrahlung* is probably the most widely known effect of this type. In the *bremsstrahlung* case the radiation is emitted as a consequence of the charge being decelerated (i.e., reduction of energy), there is, however, another type of acceleration that does not imply a change in the energy of the particle, but a change of direction.

The radiation emitted by a charged particle when its trajectory is deviated without changing its energy is known as *synchrotron radiation* or *synchrotron light*. As the name suggests this effect was initially observed in the bending magnets of relativistic circular machines, namely electron synchrotrons, but is in fact emitted any time the trajectory of a charged particle is modified. In accelerators the magnetic field of the bending magnets is used to force the trajectory of the particles into a circular orbit, as a by-

product synchrotron radiation is emitted. This radiation can be exploited for scientific purposes like in synchrotron light sources, or can be a nuisance since the energy carried by this radiation is subtracted from the energy of the particles.

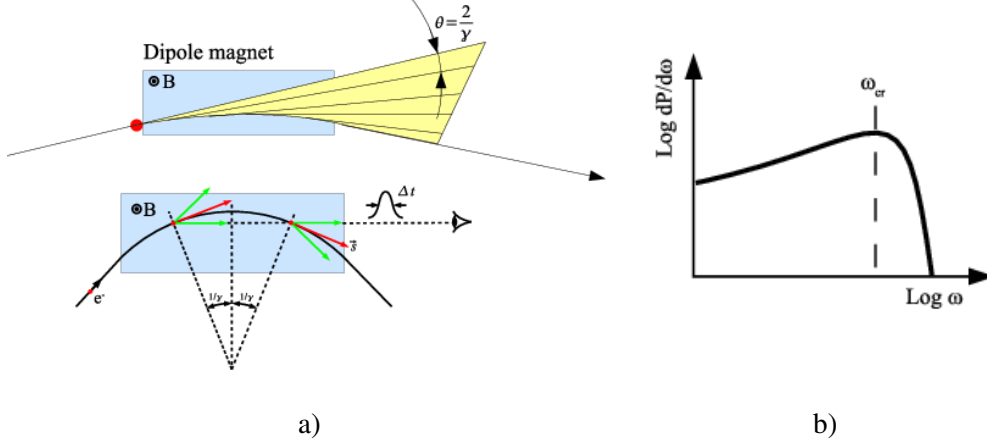


Figure 15: A charged particle emits synchrotron light while travelling inside a bending magnet (a). Spectrum of the radiation (b).

The fraction of energy lost by the beam via synchrotron radiation can be very important and constitutes a huge limitation on the maximum energy of electron synchrotrons. The Large Electron–Positron collider (LEP) at CERN, for example, accelerated counter rotating electrons and positrons up to 100 GeV ($\gamma \approx 2 \cdot 10^5$) and the RF system had to restore at each turn about 3% of the energy of the beam that was lost by synchrotron radiation. The total irradiated power was of the order of 10 MW [6]. In contrast the Large Hadron Collider (LHC) with the same circumference, a proton beam energy of 7 TeV ($\gamma \approx 7 \cdot 10^3$) and a beam current about 100 times that of LEP only emits about 2 kW.

The power emitted by a charged particle in the form of synchrotron radiation inside a bending magnet is given by [7]

$$P = \frac{1}{4\pi\epsilon_0} \frac{2}{3} \frac{ce^2\gamma^4}{\rho^2}. \quad (19)$$

The photons are emitted with a strongly forward peaked distribution (arising from the relativistic transformation from the particle reference frame to the laboratory reference frame), the aperture of this distribution is approximately given by $2/\gamma$. As a particle travels around an accelerator it will continuously enter and exit bending magnets. The radiation emission will therefore start at the entrance of the magnet, remain constant while inside the magnet and finally stop at the exit of the magnet. An observer looking from above would see the light continuously emitted as a fan (like a car driving round a bend at night) see Fig. 15. On the other hand, an observer looking into the beam pipe would only see a flash whose duration corresponds to the difference in travel time between the photons and the particle during the time it takes the particle to be deviated by the angle $2/\gamma$, see Fig. 15. If the same observer would look at the entrance/exit edge of the magnet (blue arrows on Fig. 17) he would see an even shorter pulse.

The spectrum of the synchrotron radiation can be obtained by Fourier-transforming the pulse shape. The pulse length inside the magnet is given by

$$\tau = \frac{2\rho}{\gamma\beta c} - 2 \sin\left(\frac{1}{\gamma}\right) \frac{\rho}{c} \approx \frac{4}{3} \frac{\rho}{c\gamma^3}, \quad (20)$$

with the typical frequency around

$$f_{\text{typ}} \sim \frac{1}{\tau} \approx \frac{c\gamma^3}{\rho}. \quad (21)$$

An important parameter of synchrotron radiation is the critical frequency ω_{cr} and it is defined so that one half of the total radiation power is emitted at frequencies below ω_{cr} and the other half above

$$\omega_{cr} = \frac{3}{2} \frac{c\gamma^3}{\rho}. \quad (22)$$

In beam diagnostics it is often preferred to build devices operating in the visible range for simplicity, in some conditions, however, the emission spectrum of synchrotron radiation from a bending magnet does not cover this range, in these cases the so-called *edge radiation* can be useful. The concept is that, from fundamental Fourier transform properties, shorter pulses correspond to wider spectra and thus edge radiation extends to lower (and higher) wavelengths compared to simple *dipole radiation*; this trick is often used in high-energy proton machines where the synchrotron radiation just starts to be exploitable for diagnostic purposes.

In case we want to observe the synchrotron radiation at wavelengths far from the critical frequency ω_{cr} we have to take into account that the emission cone will have an aperture quite different from the $2/\gamma$ mentioned earlier

$$\sigma_\theta = \frac{2}{\gamma\sqrt{2\pi}} C(y), \quad (23)$$

where $C(y)$ is a tabulated function of $y = \omega/\omega_{cr}$ that can be seen in Fig. 16.

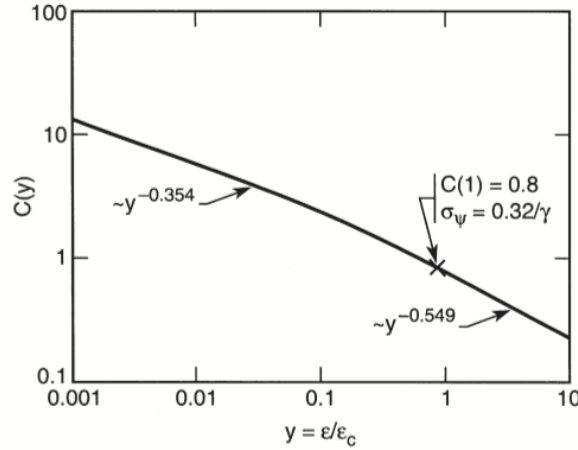


Figure 16: Synchrotron radiation opening angle variations as function of ω/ω_{cr}

If the bending magnet is replaced by a sequence of dipole magnets with alternating polarities, it is possible to produce synchrotron radiation without significantly modifying the trajectory of the particle, typically a device with three poles is used and takes the name of *wiggler* magnet. This device is usually used where the important aspect is to force the beam to produce synchrotron light with no particular interest in the properties of the radiation. If the device consists of a large number of regular periods it takes the name of *undulator*; the particles instead of being just deviated will oscillate around the central trajectory. The resulting radiation will have a much narrower spectrum centred on a well defined wavelength defined by the undulator period length

$$\lambda = \frac{\lambda_u}{2\gamma^2}, \quad (24)$$

and the emitted power is

$$W \propto B_0^2 \gamma^2, \quad (25)$$

where B_0 is the absolute magnetic field in the centre of the pole.

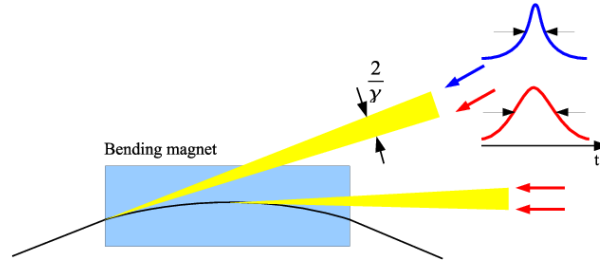


Figure 17: The pulse length of the synchrotron light seen by an observer looking at the entrance/exit edge of the magnet is shorter than the pulse seen by an observer looking inside the magnet

2.2.7 Inverse Compton scattering

In the theory developed by Compton [8] [9], the scattering of a high energy photon on an electron at rest is described. The case where the energy of the electron is much larger than the energy of the photon is usually referred to as *inverse Compton scattering* (Fig. 18).

In order to understand inverse Compton scattering, it is sufficient to move to the reference frame of the high energy electron; in this reference frame what is observed is just the well known Compton scattering with the electron at rest and the photon having a much higher energy than in the laboratory frame. After this change of reference the interaction can be calculated with the existing detailed mathematical model of Compton scattering. After this it is sufficient to re-transform the resulting particles back to the laboratory reference frame, in this process the photon will increase again its energy (gamma boost).

In inverse Compton scattering the energy of the photon gets a boost of the order of γ^2 at the expense of the energy of the electron, and the direction of the emerging photon is peaked around the direction of the electron. In Compton scattering there is a strong correlation between the energy lost by the photon and the scattering angle. The same happens in inverse Compton scattering with the difference that this time the photon gains energy and the relation between angle and energy is complicated by the two reference frame transformations.

In beam diagnostics the electron usually has high energy (typically in the GeV range) and the photon is in the range from infra-red (IR) to ultra-violet (UV) (~ 1 to 4 eV) where powerful lasers are available.

The total cross section for Compton scattering, described by the Klein–Nishina formula, is rather small, of the order of 10^{-25} cm^2 for electrons [10], but with modern lasers it possible to obtain measurable signals for electron/photon (or positron/photon) collisions. Although this effect exists for proton beams as well (usually called Compton scattering on protons), the cross section is much smaller as it scales with the square of the rest mass and it is thus not possible to obtain sufficient signals.

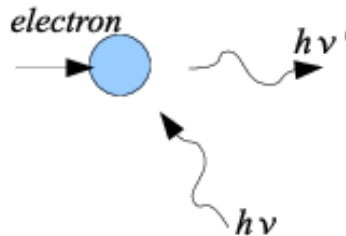


Figure 18: A low-energy photon interacts with a high-energy electron. A fraction of the energy of the electron is transferred to the photon in the process.

2.2.8 Photo dissociation

Another interesting phenomenon concerning the use of lasers in beam diagnostics is photo-dissociation or photo-neutralization. In this case photons are used to detach the extra electron from negatively charged hydrogen ions (H^-). This process can be facilitated by external electric or magnetic fields that if opportunely applied reduce further the already small ionization potential.

This process has attracted a lot of interest recently as most new developments of high current proton linear accelerators favour the use of H^- beams. The reason for this is that the injection inside a downstream circular machine can be done by stripping the two electrons instead of using septa and kickers allowing what is called *phase-space painting* resulting in much more brilliant beams. Figure 19 shows a schematic of photo-neutralization and how the different species can be separated for detection.

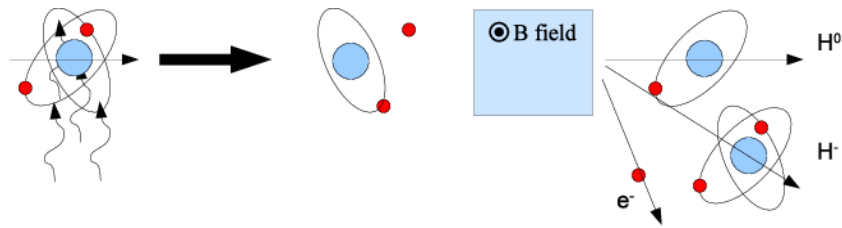


Figure 19: A laser beam is used to free the extra electron on an H^- ion resulting in a neutral hydrogen atom and a free electron travelling at the same speed. A dipole magnet is used to separate the three species emerging from the interaction.

3 Sampling techniques

We have just seen the different processes that can be used for the detection of particles and the sampling of distributions. Apart from intercepting vs. non-intercepting, there is one additional distinction that can be made on sampling techniques, and precisely between one-dimensional sampling and two-dimensional sampling.

While two-dimensional sampling allows the direct sampling of the transverse space, the 1D sampling only allows the acquisition of projections. To express this difference more clearly, think of a beam where coupling deforms the distribution of particles in the transverse geometrical space into a tilted ellipse (i.e., an ellipse whose major and minor axes are not aligned with the x and y axes). If we use a 2D sampling device, i.e., we take a picture of the beam, we immediately observe it. On the contrary, if we use only 1D sampling devices, i.e., we acquire projections, we will not notice that the ellipse is tilted, and this even acquiring x and y projections simultaneously.

In the particular case presented above, the problem could be solved by acquiring three one-dimension profiles, one along x , one along y , and the third at 45° . In case of an arbitrary transverse distribution, a complex system with a large number of 1D projections can eventually disclose the full distribution (tomography). In many machines, however, especially high-energy circular accelerators, the shape of the distribution is known and the measurement of the x and y profiles is sufficient to define the scaling parameters (usually with a fit of the measured data to a model).

In the one-dimensional sampling we have

- Wire scanners
- Wire grids
- Rest gas ionization monitors
- Laser wire scanners

While in the two dimensional sampling we have

- Screens and radiators
- Synchrotron radiation

3.1 Sampling projections

3.1.1 Wire scanners

The principle of the wire scanner is rather simple and consists of moving a wire across the beam while monitoring a signal proportional to the number of particles interacting with the beam, see Fig. 20 and Fig. 21. Certainly the wire has to be placed inside the vacuum chamber increasing the complexity of the system. The signal observed is usually either the secondary emission current (SEM) from the wire, or the flux of high energy secondary particles downstream of the wire. The high energy secondaries are often detected with scintillators coupled to photomultiplier tubes (PMT). Neutral optical filters could be interposed between the scintillators and the PMT in order to avoid saturating the PMT and increase the dynamic range.

The precision of the wire scanner is dominated by two aspects: the precision with which the wire is positioned and the precision of the acquired signal. The major problem in building a wire scanner is to design a solid and stable mechanical support for the wire and an accurate mechanism for the movement. Frequently some sort of encoder or resolver is used to read the position of the wire support (fork).

The speed of the movement mechanism varies over a very large range depending on the application. On linacs or transfer lines where the beam consists of short pulses at low repetition rate, a high speed device is not required as the measurement is performed by acquiring one sample on each beam pulse (usually < 100 Hz) leaving plenty of time to move the wire from one pulse to the next, for example, 500 μm steps at 100 Hz correspond to a speed of 5 cm/s. On the other hand, in circular accelerators where either the beam intensity is elevated or the energy of the machine is rapidly increasing a fast scan is essential (to reduce wire heating in the first, and to sample the whole profile at the same energy in the second). In these cases wire speeds of ~ 20 m/s have been achieved (typical revolution frequencies in circular accelerators exceed 1 MHz).

Over heating of the wire and consequent wire damage is the most common problem with wire scanners, see, for example, Ref. [11] for a detailed description.

Although there are deconvolution techniques that can help reduce the error introduced by the finite size of the wire, it is better to keep the wire diameter much smaller than the size of the beam to be measured. For this reason very thin wires are used, in the range between ~ 5 μm to ~ 50 μm (of course thicker wires are possible for large beams). The mechanical constraints imposed by the deformation or damage of the wires is the main limitation for the speed. The deformation of the mechanics and of the wire are also the main source of error in fast wire scanners, for this reason all high resolution scanners have slow movements [12] [14].

The SEM signal is typically used with low energy beams as in this case no energetic secondary particles are generated; this signal tends to be quite small and requires care in the acquisition. A serious problem with the detection of the secondary emission is the fact that when the wire is heated above 1000°C by the beam it starts emitting electrons by thermionic emission perturbing the measurement of the SEM current.

The signal from high energy secondaries is typically large due to the high gain of the scintillator/photo tube detector. On the other hand, beam losses can pollute the signal and, more importantly, due to the geometry of the detector and of the beam line, the signal induced in the detector may depend on the position of the wire and direction of the particles, introducing distortions and aberrations in the profiles.

The detection of the high energy secondaries is often accomplished by mean of photomultipliers. It worth mentioning that the gain of a photomultiplier depends on the voltage potential applied to the

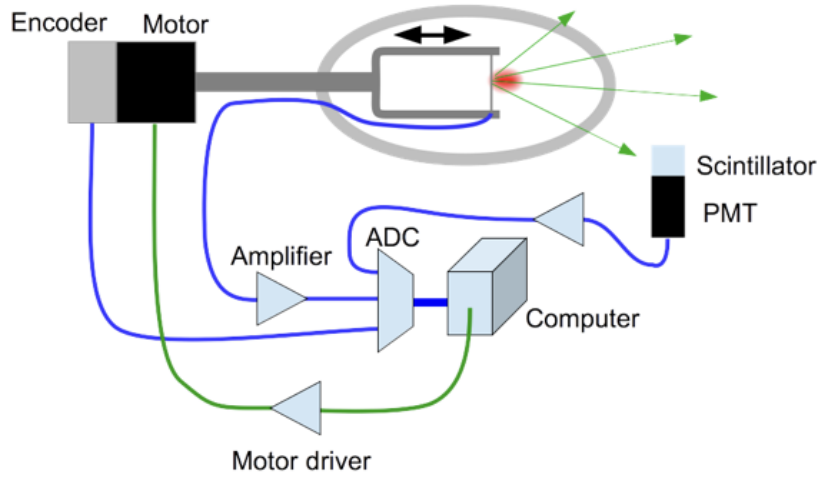


Figure 20: A thin wire is scanned through the particle beam while the secondary emission current, the signal from a calorimeter downstream, and the signal of the motor encoder are acquired simultaneously. Plotting either of the SEM or PMT signals against the encoder gives the beam profile.

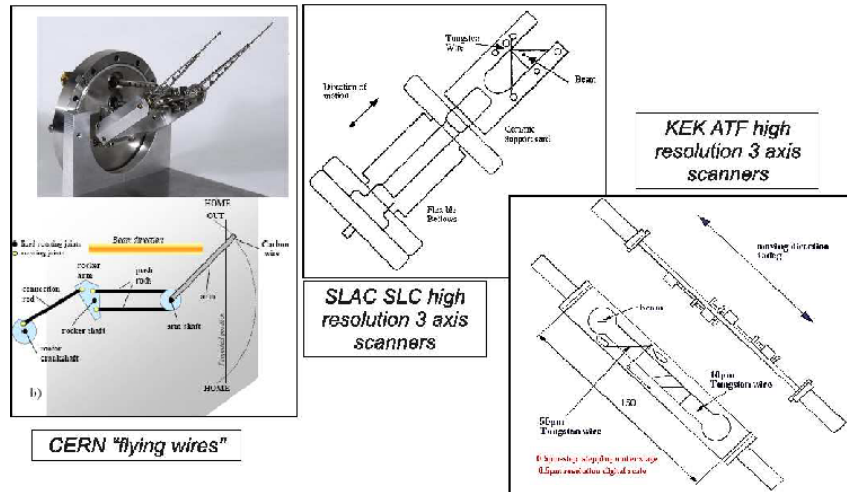


Figure 21: Different types of rotative and linear wire scanners

various dynodes. The different bias voltages are usually obtained by resistive dividers inside the base and the total current draw at the anode affect this partition. It is very important to ensure that the output level of the photomultiplier is well inside the linear region where the anode current does not perturb the gain.

The dimension of the wire has a direct impact on the signal strengths for both techniques; in the case of SEM the signal is proportional to the radius of the wire (SEM is a surface effect only) while for the high energy secondaries the signal is proportional to the square of the radius as it is a volume effect.

Figure 22 shows an example of beam profiles acquired with a wire scanner in the CERN PS accelerator.

The slit scanner can be consider as a special case of the wire scanner. It is composed of a solid blade in which a thin slit is cut. In this device, instead of exploiting the interaction between the this wire and the beam, the blade is used to stop the beam and only let through particles inside the slit. The beam profile is obtained by acquiring the *beamlet* current downstream of the blade, using a Faraday cup for example, as function of the slit position as can be seen in Fig. 23. Slit scanners are usually employed for

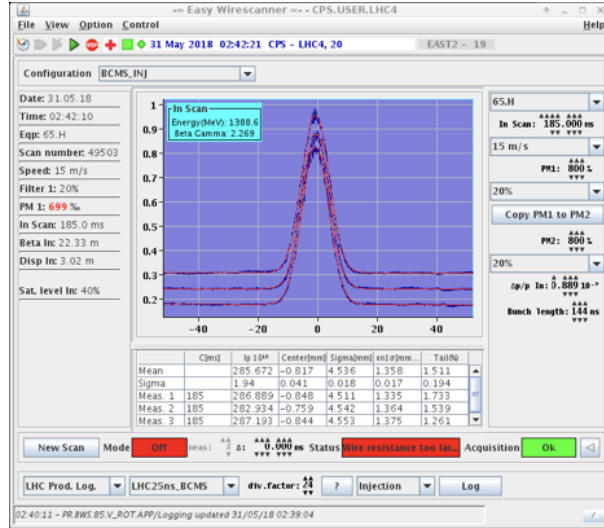


Figure 22: Example of beam profiles acquired with a wire scanner

low energy and low intensity beams and use sensitive current sensor.

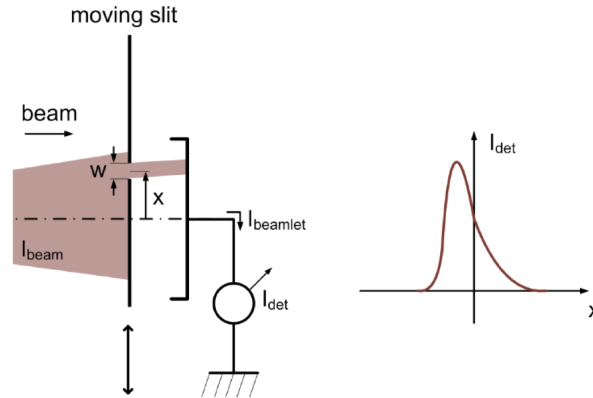


Figure 23: Principle of the slit scanner. A thin slit cut into a solid blade is scanned across the beam. At the same time the beam current downstream of the blade is recorded and plotted against the slit position.

3.1.2 SEM grids (wire harps)

Wire harps are devices where a large number of, parallel, fixed wires or strips are placed on the beam path, Fig. 24. In this case the high energy secondaries generated in the interactions between the beam and the wires can not be used as it is impossible to distinguish from which wire the particles have been generated. The acquisition of the secondary emission current from each individual wire is then the only possibility.

The advantage of a wire harp over the wire scanner is that it allows single-shot acquisitions and placing several harps one after the other allows single-shot measurement of the different planes (x and y) and/or the acquisition of the same plane at different locations (a technique used to measure the beam emittance). Another advantage over the wire scanner is the absence of moving parts, apart from a slow actuator used to insert and retract the device if needed. The drawback is the need for a complicated acquisition system with many channels and small signals and a limit on the spatial resolution as the wire spacing can hardly be reduced to less than a few hundred micrometres.

Typically the acquisition chain is composed of a head amplifier that sits as near as possible to the grid, often an area with high radiation, followed by an integrator or signal conditioning circuit that sits far away in a safe counting room, and finally a computer controlled ADC. This scheme requires one signal cable per wire over the distance from the device to the counting room and the cabling can easily become the most expensive part of the system. In order to reduce the costs, techniques have been developed for sending the signals over twisted-pair cables. Although this solution can cut the cabling costs by a large factor it also introduces limitations on bandwidth and cross-talk.

The number of wires in segmented detectors like the SEM grids varies from system to system. As a rule of thumb for Gaussian beams one can consider the maximum wire spacing to be half the beam σ and the detector size at least four σ 's which means a minimum of eight wires. This rule is valid for a perfect Gaussian beam well centred. In reality a denser mesh and a larger detector is better. Typical real systems range from 16 to 48 wires.

If the signal-to-noise allows, it is possible to acquire the signals from the wires at high speed and observe the evolution of the profiles inside a beam pulse. Acquisition frequencies up to 100 MHz have been achieved. As with wire scanners the damaging of the wires is the most important failure and having many wires permanently in the beam increases the risk, Fig. 25. For the wire grids even a single broken wire can prevent the whole system from functioning correctly as the damaged wire can short-circuit several neighbouring intact wires rendering them unusable.

One important detail for wire grids consists in avoiding that secondary electrons generated on one wire get reabsorbed by another wire as this would generate cross-talk between channels. To avoid this problem, clearing electrodes are installed around the device to generate an electric field whose lines pull the secondary electrons away from the wires.

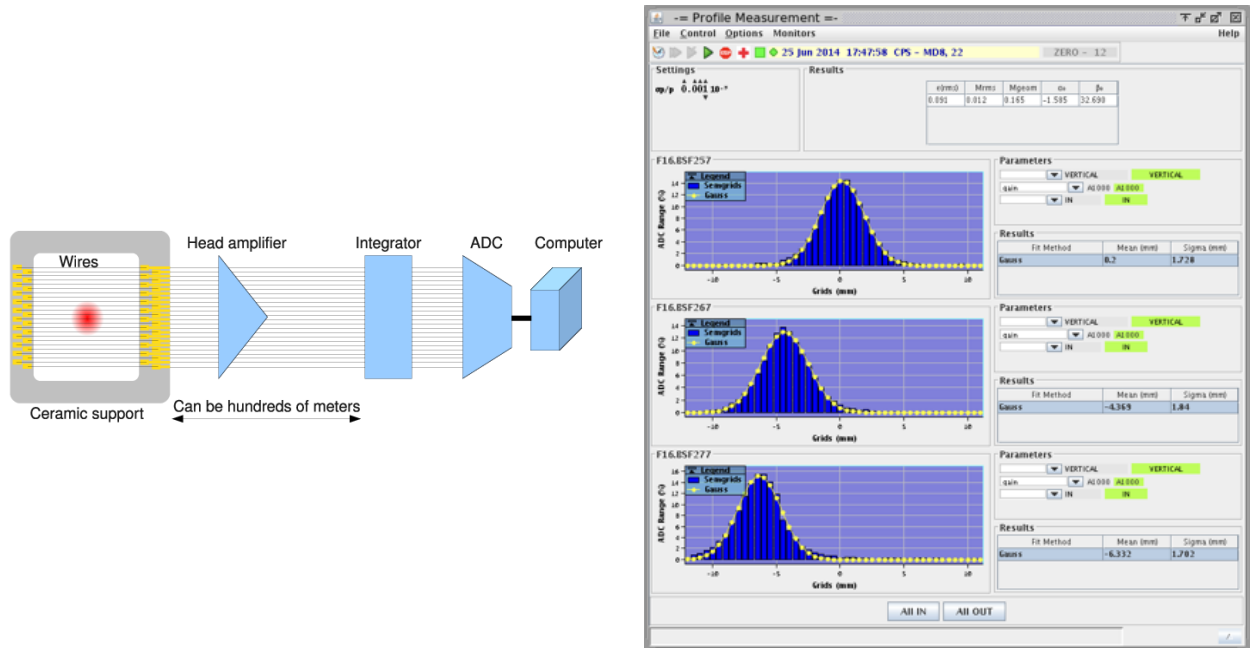


Figure 24: Schematics of a SEM grid system (left) and an example of profiles acquired simultaneously at three different locations along an emittance measurement line (right)

Thanks to the huge progress of microelectronics in recent years, it is now possible to develop radiation tolerant Application Specific Integrated Circuits (ASIC) dedicated to the acquisition of the SEM grid signals. Similar circuits are common in large physics experiments (like ALICE and ATLAS at the LHC), see Ref. [17] for example, but the technology was too complicated and expensive for small projects like a few SEM grids. Today the development and prototyping is much more affordable.



Figure 25: Pictures of a SEM grid assembly (left) and of damaged 50 μm tungsten wires (right)

A dedicated ASIC embedded in the harp can increase the sensitivity, decrease the noise, improve the time resolution and reduce the cabling costs, in particular if the chip converts the signals to a digital stream of data.

3.1.3 Ionisation profile monitor

Owing to the problem of wire damage, both the wire scanners and the wire grids can not be used in high intensity beams or in continuous monitoring in circular machines. In these cases non-intercepting devices are needed and the ionisation profile monitor has been developed precisely for these needs.

The ionisation profile monitor (IPM) is based on the interaction between the beam and the rest gas present in the vacuum chamber, even in the best vacuum there are still $\sim 10^{13}$ ions/cm³. If the rest gas density is not sufficient it can be artificially increased locally with a small gas injection.

When the particles of the beam pass through the rest gas these ionise the atoms leaving behind a column of ions and electrons. The spatial distribution of these secondaries is the same as that of the distribution of the primary particles. By detecting the distribution of the secondaries, it is thus possible to reconstruct the distribution of the particles of the beam.

The detection of the secondaries is achieved by applying an electric field perpendicular to the beam trajectory and to the plane to be observed, this field will accelerate the ions and the electrons in opposite directions. At a certain point, well clear of the beam path, a detector is installed that intercepts the drifting particles and records their arrival position.

In fact there are two options for the IPM, detecting either the electrons or the ions; in principle by switching the electric field polarity one could switch from one particle to the other, in reality the systems are optimized for one case or the other. In most cases the electrons are observed and in this case a magnetic field parallel to the electric field is required. The role of this magnetic field is to reduce the transverse drift of the electrons due to their random initial velocity and the acceleration due to the space charge of the beam (radial electric field). The electrons will spiral around the magnetic field lines while being pushed towards the detector by the electric field.

The detector can be a simple grid of collecting electrodes or an optical system based on a multichannel plate and a phosphor screen. Recently silicon detectors, similar to those used in the tracking systems of the particle physics experiments, have been used in IPMs. A good example of this new variant is the IPM developed for the CERN PS synchrotron [13].

The first type of detector is similar to a SEM grid, but instead of the SEM current it is the current from the collection of the charges that is measured, like the anode current in a vacuum tube. A positive bias potential on the wires or strips is required in order to capture and retain the incoming low energy electrons and avoid SEM emission. In case of ions a negative voltage is applied and the signal is the superposition of charge collection and SEM.

The optical detector is based on the multichannel plate, an electron multiplier array that conserves the spatial information. The amplified electrons are then accelerated toward a phosphor screen by means of an electric field of a few kilovolts. Finally a video camera records the image formed on the screen (a stripe). Figure 26 shows a sketch of an IPM system and the image acquired by the video camera while Fig. 27 shows the picture of a real device and related measurements.

Ionization profile monitors often suffer from artefacts in the measurement, the most important being the tails arising from the transverse drift of the electrons or ions during their travel towards the detector not being completely prevented by the magnetic field. More information on IPMs can be found in Refs. [15] and [16].

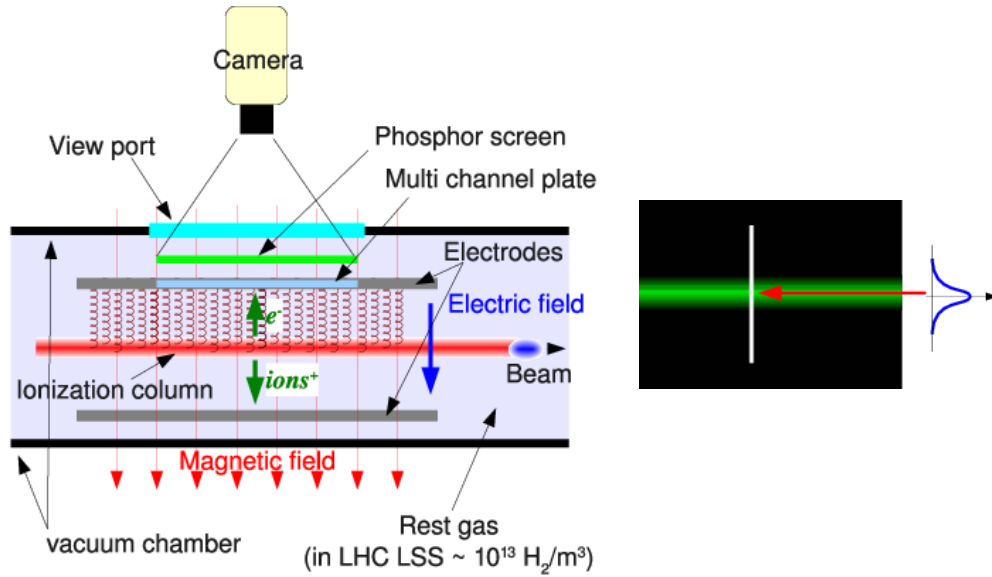


Figure 26: Schematic of an IPM monitor (left) and the relative image observed on the electron detector (right)

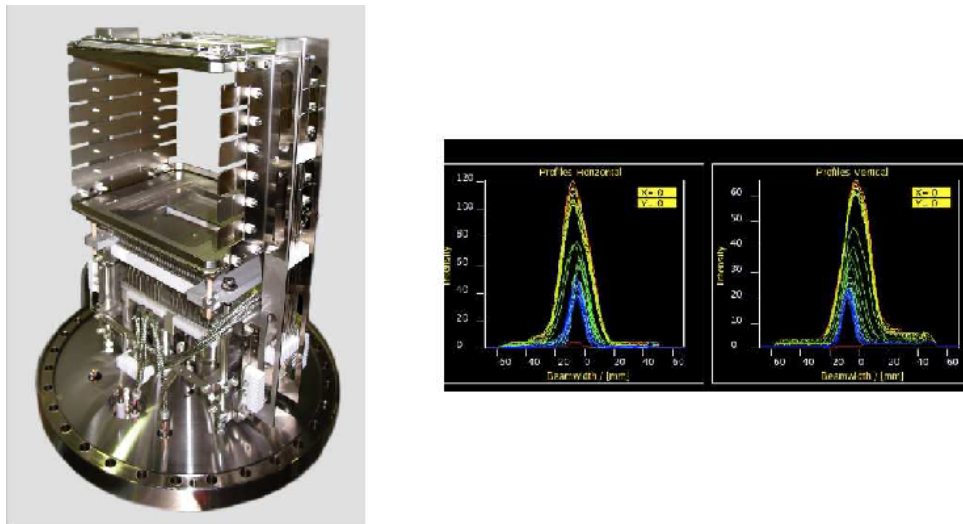


Figure 27: Picture of an IPM monitor at GSI (left) and example of measurements (right)

3.1.4 Laser wire scanner

Another type of non-intercepting 1D profile monitor is the laser wire scanner. This device is based on the inverse Compton scattering (ICS) described before and is thus only available for electron and positron beams.

The basic concept is quite simple and is depicted in Fig. 28, a powerful, well focused laser (referred to as the laser wire) is scanned across the beam to be measured, as is done in a traditional wire scanner. The photons of the laser interact with the high energy electrons and create high energy X-rays or γ -rays, with an energy boost of the order of γ^2 . A detector downstream detects the flux of those particles. By plotting the number of gammas against the position of the laser the profile of the beam is obtained.

In order to detect the generated gammas it is necessary to separate them from the primary electron beam, this is usually done by means of a dipole magnet. In circular machines this can be a bending magnet of the lattice, in linear machines or transfer lines a magnetic chicane may have to be added deliberately. When the energy of the particles is very high, it may be difficult to deflect them just for the purpose of detecting the gammas. In this case either the LWS device has to be installed in a location where the particles are already deviated from their linear trajectory for other reasons, or a different detection technique has to be used.

In the ICS process we have seen that a fraction of the energy of the particles is transferred to the photons. This fraction can be very high for ultrarelativistic beams. As a consequence the electrons that have interacted with the photons will have an energy much lower than the average energy of the beam, and are for this reason called degraded particles (degraded electrons). As the optics of the beam line is designed for the average beam energy, the degraded particles can not be transported very far and can be detected as beam losses, perhaps by sophisticated ad hoc calorimeters placed in optimized locations. In order to facilitate the collection of the degraded particles, additional magnetic systems may be introduced.

When a laser beam is focused on a small spot the divergence of the photons becomes important and the laser beam remains focused only over a short distance, limiting in practice the maximum usable length of our *wire*, this represents a major difference between the laser wire and a real wire. This limitation depends on the size of the waist of the laser beam, the smaller the waist the shorter the focused length defined by the Rayleigh length L_R . On the other hand, lasers can be focused to very small spots, about one order of magnitude smaller than the thinnest wire and thus allow the measurement of very small beams.

The size of the waist of the laser is given by

$$\sigma_0 = \frac{\lambda f}{D_L} = \lambda f / \#, \quad (26)$$

where λ is the wavelength of the laser, f is the focal length of the lens (or lens system), and D_L is the clear aperture of the lens system. The ratio f/D_L is often referred as the *stop number* in optics and denoted by $f/\#$.

The Rayleigh length represents the distance over which the laser spot size remains within $\sqrt{2}$ of σ_0 and is given by

$$L_R = \frac{2\pi\sigma_0^2}{\lambda}. \quad (27)$$

Laser wire systems usually require very powerful lasers as the cross section for the inverse Compton process is quite small. Typical lasers used for these applications deliver several millijoules of laser power in pulses of few picoseconds. The quality of the laser beam is also very important as it affects the smallest waist size that can be attained and is usually expressed in terms of the M^2 factor, $M^2 = 1$ denotes a pure monomode Gaussian beam.

in this process is then returned under the form of light. On the screen, at each location, the amount of light emitted is proportional to the number of particles that crossed it. For a monitor to work properly the linearity between particle density and light emission is of the utmost importance.

Under the label of scintillating screens there are in reality a huge number of different devices designed for different uses. In some cases thin coatings of light emitting materials (phosphors) are deposited on rigid substrates, usually for low energy and low intensity beams; the substrate can also be glass offering the opportunity to look from the back side. More often the scintillating plates are rigid objects made of some sort of ceramic, quartz, or monocrystals.

Among the most used ceramics it is worth mentioning aluminium oxide (alumina) and among the monocrystals YAG, a material also used in the fabrication of lasers. Often these materials are doped in order to increase the light emission or shift the wavelength of the emission for a better coupling with the light detector. In the case of alumina the most frequently used dopant is chromium and the material goes under the name of *chromox*. Alumina screens are by far the most used in particle accelerators. This material is in fact very robust both mechanically and thermally, has a very good light emission yield, and is relatively cheap.

A profile monitor based on scintillating screens is typically composed of the screen, an insertion mechanism, an illumination system, and a video camera for the detection as can be seen in Fig. 30. As already mentioned it is very important that the relation between particle density and acquired signal be linear. This means that the scintillating screen itself must have a linear curve of emission, but also that the detector must have a linear response and that no saturation occurs. It is very frequently the case that the image detector becomes saturated leading to a distorted distribution. For this reason selectable neutral density filters in front of the camera are often used.

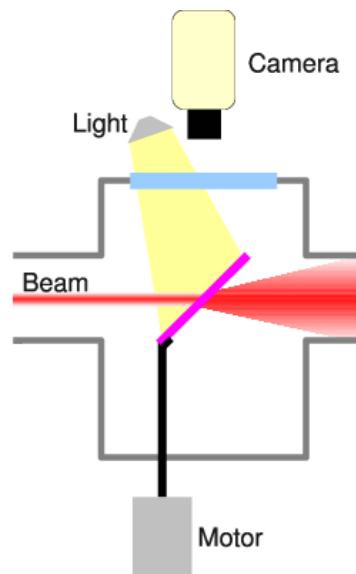


Figure 30: Schematic of a scintillating screen monitor

Scintillating screens are usually rather thick, of the order of one or more millimetres. The multiple scattering occurring inside the material increases the divergence of the beam and induces beam losses. This is the one of the reasons why the screens are inserted only when required and otherwise retracted.

Often the screen is installed at 45° to the beam and the camera at 90° as depicted in Fig. 30. This solution is convenient because it minimizes the longitudinal space required for the monitor and a round beam will appear round on the image, this is without considering the optical aberrations. In reality when the camera is not perfectly orthogonal to the screen a trapeze deformation of the image occurs, this is due to the different distances between the screen and the camera at different locations on the screen.

Calibration marks on the screen can be very useful, provided they do not interfere with the measurements, as they help in identifying errors and can be used to develop correction algorithms [20] (Fig. 31).

Another type of aberration on the image is caused by the finite thickness of the screen. As can be seen in Fig. 32, the photons are emitted all over the volume traversed by the beam and the angle of observation has an effect on the image observed. This effect is very important for mono crystal screens like YAG where one has to carefully consider the effect of refraction when the light exits the screen [18].

The best solution would be to have the screen orthogonal to the beam and the camera orthogonal to the screen, unfortunately this would mean having the camera or at least a mirror placed on the beam path. Observing the back side of the screen either directly (low energy machines) or using a mirror is a technique used in some cases. A more general compromise is to tilt the screen at small angles (Fig. 32 right), the drawback is that the longitudinal occupancy of the monitor on the beam line is increased, not always a possibility.

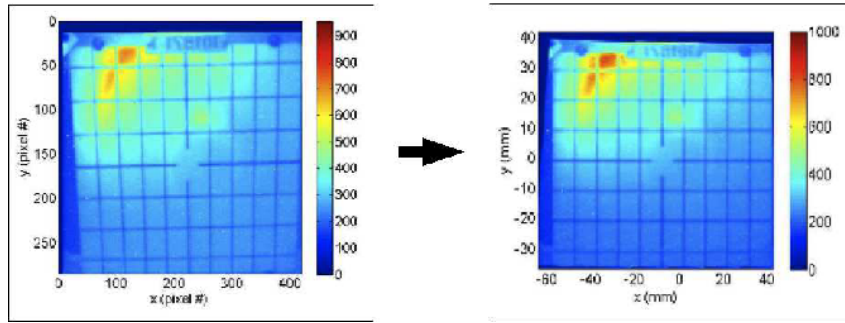


Figure 31: Correction of geometrical aberrations due to the optics system and misalignment. Before correction (left) and after (right).

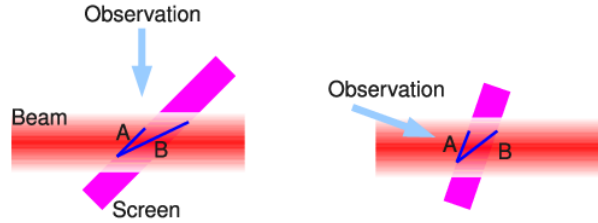


Figure 32: Errors due to the finite size of the screen thickness: A indicates the desired observation while B indicates the real observation.

The energy deposited by the beam in the screen can be sufficient to create a permanent damage. An example of damaged scintillating screen is shown in Fig. 33.

The instantaneous temperature increase in a material caused by an impinging beam can be expressed as

$$\Delta T(x, y) = \frac{\frac{dE}{dx} \rho i(x, y)}{\rho c_v} = \frac{\frac{dE}{dx} i(x, y)}{c_v}, \quad (28)$$

where dE/dx is the energy deposition from the Bethe–Bloch formula, ρ is the material density. $i(x, y)$ is the particle density of the impinging beam and c_v is the specific heat of the material of which the screen is made of. It is interesting to note that the only material properties of importance for this effect are the specific heat and the stopping power. In fact the stopping power, in the form given by Bethe–Bloch, i.e. normalised by the material density, is very similar for all materials and depends only on the projectile characteristics. From this we can conclude that, from the thermal point of view, the higher the product

$T_{\max} c_v$ the more resistant the material is. In reality one has to consider all the thermo–mechanical effects as temperature-gradient-induced-stresses can break the material well below the fusion or sublimation temperature.

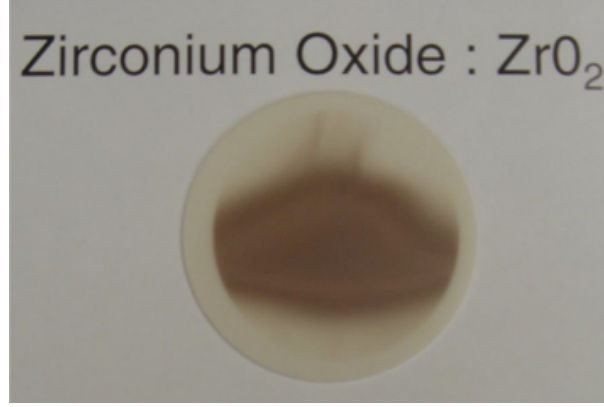


Figure 33: Zirconium oxide screen damaged by an intense Lead beam. The discoloration arises from the change of the oxide composition affecting the light emission.

3.2.2 Optical transition radiation screens

The scintillating screens described above have two main limitations: the linearity of the response curve, also due to saturation in the material, and the time persistency of the emission. As described already the linearity is an essential condition for profile monitors. The decay time of the emission is usually less important, but there are applications where a short slice of the beam, or a limited number of bunches, have to be acquired. In this case most scintillators would fail as a few microseconds is the fastest decay time available, and even in these fast materials the decay may be composed of many time constants some much longer than the few microseconds of the main emission line. Long decay times are often referred to as persistence and can be many seconds or even minutes.

In a previous section, the Čerenkov radiation was described and although it would solve the linearity and time response limitations of the scintillating screens, it poses more problems than it solves owing to the geometry of the emission.

However, a third type of radiation exists that can be used in place of the scintillating screens: optical transition radiation. OTR, described in a previous paragraph, is a surface emission (contrary to the volume emission of scintillation and Čerenkov), it has a characteristic angular distribution and is radially polarized. Figure 34 shows a schematic of an OTR system based on backward emission (forward radiation could in principle also be used, but it is difficult to separate the light from the particles and for this reason it is rarely used). Figure 35 shows an OTR station installed in TTF at DESY together with a few beam images acquired with this device.

Installing the camera just on the reflection direction of the beam would mean looking in the hole of the emission (centre of the cone) with almost no light in the aperture of the lens. The solution is to install the camera at a slightly different angle so that it is centred on the peak of the emission (portion of the OTR lobe). The angle of the OTR cone is $1/\gamma$ and thus the correct angle between the camera and the screen and the beam, these are of course equal because of the mirror–like effect, is given by

$$\varphi = \frac{1}{2} \left(\frac{\pi}{2} \pm \frac{1}{\gamma} \right). \quad (29)$$

The fact that the emission is not isotropic can introduce artefacts in the image as particles hitting different areas of the radiator or with different angles of incidence can have different acceptances (the

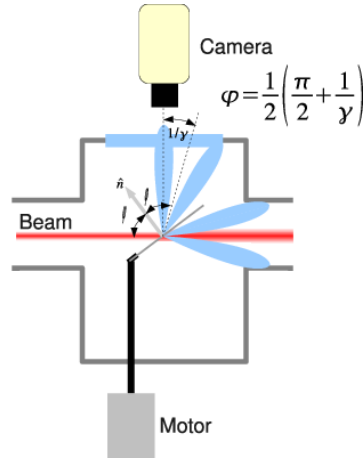


Figure 34: Schematics of an OTR monitor, note how the angles between beam, screen and camera have to follow a precise scheme.

fraction of emitted light collected by the camera). When designing an OTR system it is important to study this effect, optical simulation packages are very useful in this regard.

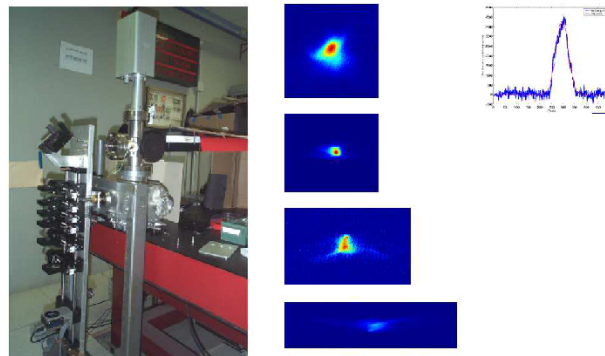


Figure 35: Picture of an OTR station used at DESY and images acquired with this type of system on TTF. Note how the complexity of the particle distribution could not be deduced from 1D profiles alone.

Another important parameter in OTR systems is the reflectivity of the radiator as we use the backward emission. The surface properties of the radiator influence both the total amount of light, with the total reflection coefficient, and the angular distribution, a rough surface will diffuse the light and smooth the peculiar OTR distribution. In some cases, for example when large screens are needed, the OTR radiator is purposely rough so as to smear the emission and obtain a more uniform angular distribution. Another solution for these applications consists in using radiators with parabolic shapes; if properly designed, parabolic radiators can concentrate the emission toward the camera independently of the position on the screen.

Frequently OTR radiators are made with high-quality mirror surfaces, using either metallic foils or thin substrates coated with metallic depositions. The second solution often offers better mirror qualities while the first reduces the amount of material on the beam path. Typical metallic foils are aluminium or titanium down to a few micrometres thickness while typical metallized substrates are silicon or silicon carbide a few hundred micrometres thick (like the wafers used in microelectronics). Aluminium or gold are frequently used as coating materials. Carbon foils are also used where high density beams have to be observed thanks to the excellent thermal properties of graphite (Fig. 36 shows how a high density beam can destroy a radiator), on the other hand the optical qualities are not quite perfect.

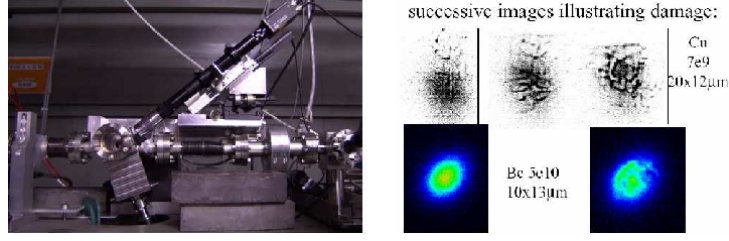


Figure 36: Picture of an OTR station used at KEK and images acquired with this type of system on ATF. The images show the damage caused to the radiators (copper and beryllium) by the beam in only a few shots.

If the numerical aperture of the optical system is large enough, and this also depends on the γ of the beam, the whole OTR cone can be observed. In order to understand this better we shall look at a practical case. Figure 37 shows a simple optical system made of a single thin lens. We first define the magnification factor of the optical system based on the size of the beam to be observed and the size of the camera sensor. Then we choose the distance between the object (the screen) and the lens, this is usually limited by the presence of the vacuum tank. At this point we can calculate all the remaining parameters of the optical system.

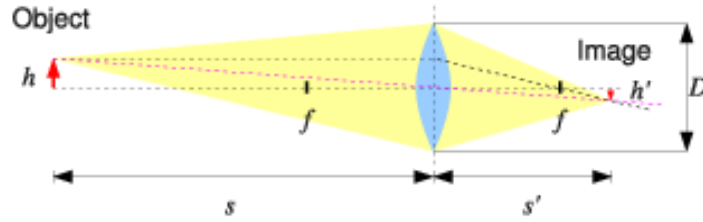


Figure 37: Simple optical system composed of a single thin lens

The magnification factor of the system m is given by

$$m = \frac{h'}{h} = \frac{s'}{s}, \quad (30)$$

and using the lens maker formula

$$\frac{1}{f} = \frac{1}{s} + \frac{1}{s'}, \quad (31)$$

we can deduce

$$f = \frac{sm}{m+1}. \quad (32)$$

We can use Eq. (32) to calculate the focal length for the lens and then Eq. (33) to calculate the last unknown parameter, the distance between the lens and the camera

$$s' = \frac{sf}{s-f}. \quad (33)$$

In a practical case we can have $s = 300$ mm and $m = 0.2$ from which we can calculate $f = 50$ mm and $s' = 60$ mm. In many cases we shall not use a single lens as this introduces aberrations, but an optical system based on many lenses. In our example we assume the use of a ready-made camera lens. A good CCTV 50 mm lens has $f/\# \sim 1.4$, from this we can calculate the lens diameter (being a complex lens system this is in fact the clear entrance aperture of the lens and not the physical diameter of the first lens)

$$D = \frac{f}{f/\#} = \frac{50}{1.4} = 36 \text{ mm}, \quad (34)$$

and the acceptance angle at the centre of the screen

$$\theta = \frac{\frac{D}{2}}{s} = \frac{36}{600} = 0.06 \text{ rad.} \quad (35)$$

We can now calculate the relativistic γ corresponding to this aperture for the OTR radiation:

$$\gamma_{min} = \frac{1}{\theta} = \frac{1}{0.06} = 17. \quad (36)$$

From Eq. (36) we obtain that for the setup of the example and for beams with γ larger than 17 we can observe the whole OTR cone, i.e., we can centre the camera on the reflection axis of the OTR radiator, while for beams of lower momentum we have to centre the camera on one of the lobes as described before.

3.2.3 Synchrotron light monitors

Another way of sampling the two-dimensional distribution of the particles is offered by synchrotron radiation (SR). The advantage of synchrotron radiation over OTR is that it does not require a radiator. This means that there are no limitations on the particle densities that can be observed. Moreover it also allows the continuous observation of the beam profiles.

SR monitors are almost always designed around existing magnets, that is around magnets that are already installed in the machine for other purposes. It may be necessary, however, to install dedicated magnets in order to overcome specific needs. For example, if the γ of the particle is too low, the spectrum of the emission from a lattice bending magnet can be concentrated in the infra-red and longer wave lengths, with important difficulties for detection. In a case like this a special magnet, called an undulator, can be used.

Undulators are periodic magnets in which the central wavelength of the SR emission depends on the magnetic period. Undulators can also be used if the intensity of the emission is not sufficient as they can be much more effective than a simple bending magnet in generating SR. Of course different beam conditions will require different solutions. It is important to keep in mind that even if an undulator is used as source a dipole magnet is still required to separate the light from the particles. Sometimes the edge effect in bending magnets can be used to shift the SR spectrum. The SR emission at the entrance and exit edges of the magnet is in fact slightly shifted towards shorter wavelengths since SR pulses are shorter there. In some cases this shift can be sufficient.

One of the biggest problems in building a SR profile monitor is the fact that the source is not well defined. As the light is emitted in the interaction between the particles and the magnetic field, the particles will emit during the whole time they traverse the magnetic field region, this can be almost continuous in compact circular machines where bending magnets are very close to one another. The result is like taking the picture of a moving car at night on a bend, we see the trace of the car, but can not make out the details of the headlights. In the case of the car it is possible to use a very fast shutter time to compensate for the motion, in a SR monitor this is not possible as the light and the particles travel almost at the same speed.

Another possibility is to use an angular selection and detect only photons that come from a particular point, our source. To define an angle we usually need two slits, only photons with the right angle will pass through both. In a SR monitor we can use the fact that the light is emitted in a very narrow cone in the direction of motion of the particle and reduce the system to a single slit Fig. 38.

Another important problem of SR is the diffraction. From optics we know that there is a precise relation between the resolution of an optical system and the numerical aperture. The finite aperture introduces diffraction and the influence of the diffraction on the image increases as we reduce this aperture.

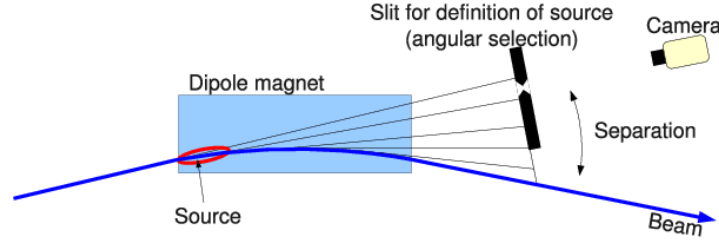


Figure 38: Sketch of a synchrotron light monitor using a bending magnet as source. The source is delimited using an angular selection defined by the slit and the natural small opening angle of SR.

For an optical system the diffraction limited spot size (image plane) is often defined as the diameter of the Airy disk

$$\sin \theta = 1.22 \frac{\lambda}{D}, \quad (37)$$

$$a = \sin \theta s' = 1.22 \frac{\lambda}{D} s' = 1.22 \frac{\lambda}{D} m s, \quad (38)$$

with θ the angular resolution, a the diameter of the Airy disk, λ the observation wavelength, D the clear aperture of the lens, s the distance between the source and the lens, s' the distance between the lens and the image and m the magnification of the optical system. For our purposes it is useful to approximate the radial distribution of the Airy diffraction pattern with a Gaussian, the best fit is given by

$$I(x) \approx I_0 e^{-\frac{x^2}{2\sigma_d^2}}, \quad (39)$$

$$\sigma_d \approx \frac{a}{2.9} = 0.42 \frac{\lambda}{D} m, \quad (40)$$

and transposing the result to the object side, dividing by the magnification, we obtain

$$\sigma_{\text{d-object}} = 0.42 \frac{\lambda}{D}. \quad (41)$$

Usually in synchrotron radiation monitors the clear aperture of the optical system is larger than the aperture of the radiation itself, that is all the light emitted at a given source point is collected. In this case the diffraction limit is defined by the aperture of the radiation instead of the clear aperture of the system. We can approximate the SR angular distribution with a Gaussian of width σ_θ , in this case the fit to the diffraction pattern will give

$$\sigma_{\text{d-object}} \approx 0.15 \frac{\lambda}{\sigma_\theta}, \quad (42)$$

and applying Eq. (23) we obtain

$$\sigma_{\text{d-object}} \approx 0.19 \frac{\lambda \gamma}{C(y)}. \quad (43)$$

The important result of Eq. (43) is that the resolution of the synchrotron light monitor is proportional to $\lambda\gamma$, this means that for highly relativistic beams we can expect serious resolution limits that can only be solved by observing shorter and shorter wavelengths. For this reason, on electron machines, where small resolutions are required, even below the micro meter, synchrotron light monitors are often based on the detection of soft X-rays. Other techniques like deconvolution of the point spread function or interferometry allow one to extract useful information even when the diffraction effects are important.

Another important aspect of Eq. (43) is that it is independent of the optical parameters of the system. This means that the optical resolution that can be achieved with a synchrotron light monitor

is defined by the radiation source alone. In reality diffraction is not the only effect contributing to the optical resolution, other effects like the depth of field are also important. The design of the optics still requires careful studies and simulations.

Let us examine a practical example, a synchrotron light monitor for a typical SR light source with $E = 2 \text{ GeV}$ ($\gamma = 3914$) and $\rho = 10 \text{ m}$. The critical energy of the emitted photons is $E_{cr} = 1.7 \text{ keV}$ and for $\lambda = 400 \text{ nm}$ we obtain $C(y) \approx 9$. Plugging these values into Eq. (43) we obtain a resolution of $\sigma_d \approx 33 \text{ }\mu\text{m}$. It is important to note that when the observation wavelength is far from the critical wavelength the $C(y)$ parameter can have a large impact on the estimation of the resolution and can not be neglected.

In SR monitors one critical component is the mirror used to extract the light out of the vacuum chamber. In lepton machines the SR spectrum can be very hard, with λ_{cr} in the hard X-rays, and very intense. This leads to a large energy deposition inside the mirror creating gradients that distort the shape and even potentially damaging the surface. Often this problem is mitigated by placing an absorbing mask on the central path of the radiation, where the hard components are predominant, and using only the softer and less intense outer region for the detection. If the extraction mirror has to be placed near the circulating beam the radio frequency fields generated by the circulating particles can heat the mirror or induce sparking, similar to the disasters that can be obtained by placing metallic objects in a microwave oven. In this case the choice of the geometry and of the materials is very important.

Synchrotron radiation monitors for the X-rays are complicated by the difficulty of deflecting and focusing the radiation in an imaging system. X-rays mirrors only work at grazing angles and precise wavelength filters are very complicated (Bragg monochromators). Four main techniques are available: pinhole camera, X-rays refractive lenses, Fresnel plates and focusing mirrors. All these techniques have pro and cons, each one suiting best a particular problem. The most used one is the pinhole camera as it is the simpler to implement. The principle is the same used at the beginning of photography, known as camera obscura, and is described in Fig. 39. The magnification of the system is given by the ration between d_2 and d_1 and the depth of field is infinite as there is no focusing element, so the screen can be put at any distance.

The resolution of the pinhole camera is limited by the finite size of the pinhole (blur) and by the diffraction of the pinhole. Assuming we can describe both effects as Gaussian blurring with width σ_{blur} and $\sigma_{\text{diffraction}}$ in case of a Gaussian source we can write [19]

$$\sigma_{\text{image}}^2 = \sigma_{\text{source}}^2 m^2 + \sigma_{\text{blur}}^2 + \sigma_{\text{diffraction}}^2, \quad (44)$$

with

$$\sigma_{\text{blur}} = \frac{w}{\sqrt{12}} \frac{d_1 + d_2}{d_1}, \quad (45)$$

$$\sigma_{\text{diffraction}} = \frac{\sqrt{12}}{4\pi} \frac{\lambda d_2}{w}, \quad (46)$$

where m is the magnification d_2/d_1 , w the width of the rectangular pinhole, λ the wavelength, d_1 the distance source–pinhole and d_2 the distance pinhole–screen. The pinhole camera does not require monochromatic light like the X-ray refracting optics, a simple metal plate can be used to remove the low energy photons that would increase the diffraction blur.

Figure 40 shows the schematics of a real X-rays pinhole camera developed for a synchrotron light source. As it can be seen it is quite more complicated than the original camera obscura.

Another often used technique to overcome the limitations imposed by diffraction is to use a double slit interferometer like the one used by Young. The visibility of the interference fringes (interferogram) can be used to calculate the spatial coherence of the source and infer its transverse dimension.

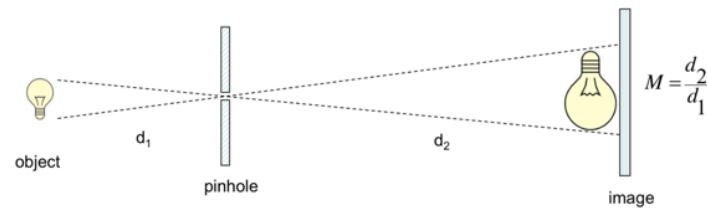


Figure 39: Schematic of the camera obscura, the light emitted by the source passes through a small hole and is geometrically projected onto a screen.

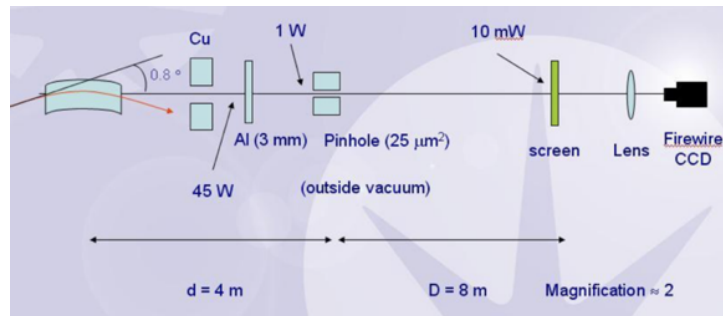


Figure 40: Schematic of the X-rays pinhole camera developed by the DIAMOND light source in the UK.

4 Light sensors

Many of the monitors described above are based on the detection of visible light. Light sensors can be divided into two families:

- One-dimensional sensors
 - Photodiode array
 - Linear CCD
 - Segmented photomultiplier (multi-anode PMT)
- Two-dimensional sensors
 - Area CCD
 - Area C-MOS
 - Multi anode photomultipliers

4.1 One-dimensional sensors

One-dimensional sensors are usually faster. The readout can be of sequential or parallel type. In the second case each channel is read out independently and the acquisition chain requires as many channels as there are channels in the detector. The sequential type instead requires only one readout channel and the values of the channels of the detector are acquired one after the other using a multiplexing technique.

Usually photodiode arrays and multi-anode PMTs are of the parallel type while the linear CCDs are of the sequential type. The parallel type can only be used when the number of channels is limited as the electronics and cabling would otherwise become too complex, typically up to 32 channels. The advantage of these devices is that they can be very fast, with acquisition rates up to 100 MHz. The linear CCDs on the other hand allow a large number of channels with a rather simple readout electronics.

CCDs with over 1000 channels are available, the readout speed is, however, much reduced and usually does not exceed 100 kHz depending on the number of channels (typical channel data rate is of

the order of 20 MHz). Often linear CCDs allow the selection of the number of channels to be read depending on the needs of the application. It is then possible to develop a detector that can switch between fast acquisition with few channels and slow acquisition with many channels.

In terms of sensitivity the multi-anode PMTs are superior to the other two devices as an amplification up to 10^5 takes place inside the device itself allowing the detection of single photons. The diode arrays and the linear CCDs have similar sensitivities and require a large number of photons for a good signal ($\sim 50\,000$ /channel).

The PMTs on the other hand are a bit more complicated to use as they require a high voltage bias (~ 1000 V) and can be damaged by a high light intensity. PMTs are also very good in terms of radiation resistance, much better than the other two solid-state devices.

4.2 Two-dimensional sensors

Two-dimensional detectors only have sequential readout as the minimum number of channels needed to acquire an image is already much too large for parallel readout ($32 \times 32 = 1024$). Although 2D segmented photomultipliers and photodiode arrays exist, their granularity is usually very small and not made for the acquisition of images (max. 8×8).

There are two main families of solid-state 2D image sensors, CCDs and C-MOS. The difference between the two is that the CCD is a matrix of pixels (electron wells) that are shifted one after the other towards the readout electronics while the C-MOS is a matrix of pixels each one directly connected via a multiplexing system to the readout electronics. In principle the difference should not be important for normal acquisitions, in fact the CCD is just a silicon substrate with *transparent* electrodes on top, while the C-MOS device requires electronic components next to each pixel. The filling factor of the two devices is thus quite different (fraction of the area of the detector that detects the impinging photons). Innovation in microelectronics in the last 10 years and clever designs have improved dramatically the performance of the C-MOS sensors. C-MOS cameras, once cheap low end devices, have now overtaken the CCD in almost all application fields. In the near future the CCD technology will completely disappear or be relegated to very special market niches. State of the art commercial C-MOS sensors have achieved readout noise of few electrons, almost a factor ten better than equivalent CCDs. C-MOS sensors optimised for low light conditions, called scientific C-MOS or sC-MOS, can achieve readout noise of less than one electron, the cost is however one order of magnitude larger than standard commercial sensors.

One advantage of the C-MOS is that any portion of the detector can be read out at will while on CCDs the whole matrix has to be read out. This is a big advantage for us as we can readout an area of interest (AOI) at much higher rate. Readout speeds up to the kilo Hertz are possible with simple cameras for an AOI of $\approx 100 \times 100$ pixels.

Readout speeds of 2D devices are quite slow, typical sensors are designed for 50 Hz readout. There are, however, special C-MOS devices designed for higher acquisition speeds. In these devices the readout is split into many parallel blocks (called taps) to reduce the time needed, the use of small AOI can further increase the frame rate. With such special cameras speeds of the order of 1 MHz (10^6 frames per second) are possible.

A interesting 2D device is the video tube. Nowadays this technology is obsolete and it is quite difficult to find new parts; it is, however, still widely used in particle accelerators as it is very tolerant of ionising radiation. In many locations inside accelerators the radiation is too high for devices like CCDs or C-MOS and the video tube is the only device that can acquire images of the beam in these situations.

There is also another type of image sensor, similar to the C-MOS, the CID (charge injection device). Although this technology has not been pushed as far in performance as the C-MOS it has the advantage that it has been optimised for radiation-hardness. These devices can be used in areas where radiation is moderated, usually rad-hard CID cameras can stand up to 5 Mrad while CCDs and C-MOS only survive up to ~ 100 krad.

There are a number of projects ongoing world wide that aim at producing solid state radiation hard image sensors. The hope is to obtain a replacement for the video tubes with better performances.

Another important aspect of image cameras is the format of the output signal. Until few years ago the standard was a well defined analog signal that was then acquired by mean of so called frame grabber cards. With the ascent of C-MOS sensors the digitisation has been embedded in the sensor chip itself so that the cameras already output a digital signal typically over a USB or ethernet interface.

Acknowledgements

I would like to thank all the people working in beam instrumentation as most of the material presented in this lecture has been taken from many published documents. It is impossible to mention specific names as there are so many involved.

Bibliography

- [1] R. G. Lye and A. J. Dekker, "Theory of secondary emission", Phys. Rev. 107(4) (1957) 977–981.
- [2] V. L. Ginzburg and V. N. Tsytovich, "Transition radiation and transition scattering", Hilger, Bristol, 1990.
- [3] L. Wartski, J. Marcou and S. Roland, "Detection of optical transition radiation and its application to beam diagnostics", 5th IEEE Particle Accelerator Conference, San Francisco, CA, USA, 5–7 Mar. 1973, pp.544.
- [4] H. Loos, R. Akre, A. Brachmann, F.-J. Decker, Y. Ding, D. Dowell, P. Emma, J. Frisch, S. Gilevich, G. Hays, Ph. Hering, Z. Huang, R. Iverson, C. Limborg-Deprey, A. Miahnahri, S. Molloy, H.-D. Nuhn, J. Turner, J. Welch, W. White, J. Wu, "Observation of Coherent Optical Transition Radiation in the LCLS Linac", 30th International Free Electron Laser Conference, Gyeongju, Korea, 24–29 Aug. 2008, pp.485.
- [5] "Scintillation Screens and Optical Technology for transverse Profile Measurements", <https://indico.cern.ch/event/765975/>, Joint ARIES-ADA workshop, Krakow, Poland, 1–3 Apr. 2019.
- [6] J. M. Jowett, "Beam dynamics at LEP", CERN-SL-98-029-AP, CERN, Geneva, Jun. 1998.
- [7] A. Hofmann, "Synchrotron radiation from the large electron-positron storage ring LEP", Phys. Rep. 64(5) (1980) 253–281.
- [8] A. H. Compton, "The spectrum of scattered x-rays", Phys. Rev. 22(5) (1923) 409–413.
- [9] A. H. Compton, "A general quantum theory of the wave-length of scattered x-rays", Phys. Rev. 24(2) (1924) 168–176.
- [10] D Fargion, R V Konoplich and A Salis, "Inverse Compton scattering on laser beam and monochromatic isotropic radiation", Z.Phys. C74 (1997) 571–576.
- [11] M. Sapinski, "Model of carbon wire heating in accelerator beam", CERN-AB-2008-030-BI, CERN, Geneva, Jul. 2008.
- [12] H. Hayano, "Wire scanners for small emittance beam measurement in ATF", 20th International Linear Accelerator Conference, Monterey, CA, USA, Aug. 2000, MOC01.
- [13] J. Storey *et al.*, "First Results From the Operation of a Rest Gas Ionisation Profile Monitor Based on a Hybrid Pixel Detector", 6th International Beam Instrumentation Conference, Grand Rapids, MI, USA, 20–24 Aug 2017, pp.WE2AB5
- [14] G. Arduini, B. Dehning, G. Ferioli, J. Koopman, D. Kramer and F. Roncarolo, "Accuracy of profile monitors and LHC emittance measurements", CERN-LHC-Project-Report-782, CERN, Geneva, Aug. 2004.

- [15] K. Satou, N. Hayashi, S. Lee and T. Toyama, "A prototype of residual gas ionization profile monitor for J-PARC", 10th European Particle Accelerator Conference, Edinburgh, UK, Jun. 2006, pp.1163.
- [16] P. Forck, A. B. Bank, T. Giacomini and A. Peters, "Profile monitors based on residual gas interaction", 7th DIPAC, Lyons, France, Jun. 2005, pp.221
- [17] F. Anghinolfi, P. Jarron, F. Krummenacher, E. Usenko and M. C. S. Williams, "NINO: An ultrafast low-power front-end amplifier discriminator for the time-of-flight detector in the ALICE experiment", IEEE Trans. Nucl. Sci. **51** (2004) 1974.
- [18] R. Ischebeck, E. Prat, V. Thominet and C. Ozkan Loch, "Transverse profile imager for ultrabright electron beams", Phys. Rev. ST Accel. Beams **18** (2015) no.8, 082802.
- [19] P. Elleaume, C. Fortgang, C. Penel and E. Tarazona, "Measuring Beam Sizes and Ultra-Small Electron Emittances Using an X-ray Pinhole Camera", J. Synchrotron Rad. (1995). 2, 209-214
- [20] E. Benedetto and E. Bravin, "Calibration and correction of the BTVs images", CERN-AB-Note-2008-024, CERN, Geneva, Apr. 2008.